

HOWE®

Rapid Freeze® Ice Flaker

Installation & Service Manual
For Use with Remote Single Condensing Unit

51-RL

76-RL

101-RL

Howe Corporation

1650 North Elston Avenue
Chicago, IL 60642-1585

Phone: 1-773-235-0200

Fax: 1-773-235-0269

Website: www.howecorp.com

Email: howeinfo@howecorp.com

ENGINEERING GUIDELINES	3
Location Requirements	3
Water Supply Requirements.....	3
Drain Water Piping Requirements	4
Electrical Requirements.....	4
Capacity Ratings	5
Refrigeration Requirements	5
Piping Table.....	8
Refrigerant Pipework	8
Refrigerant Pipework Insulation Requirements	8
FIELD INSTALLATION	9
Safety Information and Guidelines	9
Inspection	9
Condensing Unit Rigging and Mounting	9
Piping	10
Leak Testing	10
Field Wiring	11
Evacuation	12
Refrigerant Charging Instructions	12
Installation Checklist	13
START UP AND OPERATION	14
Water Operation	14
Refrigeration Operation	17
Electrical Operation.....	22
Mechanical Operation	30
Start-Up Checklist.....	33
MAINTENANCE	34
Preventative Maintenance Schedule	34
Cleaning Procedure	35
Sanitizing Procedure.....	36
Lubrication	37
Water Filtration.....	38
TROUBLESHOOTING	40
WIRING DIAGRAMS.....	43
REPLACEMENT PARTS	52

IMPORTANT

THE INFORMATION FOUND IN THIS MANUAL IS INTENDED FOR USE BY INDIVIDUALS POSSESSING EXPERIENCED BACKGROUNDS IN ELECTRICAL, REFRIGERATION AND MECHANICAL REPAIR AND MAINTENANCE. ANY ATTEMPT TO REPAIR OR ALTER THIS EQUIPMENT MAY RESULT IN PERSONAL INJURY OR PROPERTY DAMAGE. THE MANUFACTURER IS NOT RESPONSIBLE FOR THE INTERPRETATION OF THE INFORMATION CONTAINED HEREIN, NOR HAS THE MANUFACTURER ASSUMED ANY LIABILITY IN CONNECTION WITH ITS USE.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY LOSS, DAMAGE OR INJURY CAUSED AS A RESULT OF EITHER (I) ANY REPAIR OR REPLACEMENT TO THE MANUFACTURER'S EQUIPMENT THAT IS DONE BY A THIRD PARTY NOT PREVIOUSLY APPROVED BY THE MANUFACTURER, OR (II) ANY REPAIR OR SERVICE WORK PERFORMED ON ANY OF THE MANUFACTURER'S EQUIPMENT WHICH DOES NOT STRICTLY FOLLOW THE PROCEDURES SET FORTH HEREIN.

Engineering Guidelines

Location Requirements

Howe Rapid Freeze Ice Flakers are designed to operate in ambient room temperatures between 50°F and 100°F.

Minimum Ambient Temperature	Maximum Ambient Temperature
50°F	100°F

The Ice Flaker warranty is void if it is installed in ambient room temperatures below 50°F.

The Ice Flaker must be located above a sanitary sewer floor drain hub or trench drain to ensure proper drainage to the floor. Many designers slope floors to the sanitary sewer inlets to manage these wet areas.

If installing the Ice Flaker with a Howe Ice Bin, ensure that the bin is adequately secured to the floor or wall so as to prevent the assembly from tipping when empty.

Water Supply Requirements

Cold water supply to the Ice Flaker must be totally separate and unaffected by any local hot water supply.

This cold water supply must be within the range of 45°F to 90°F.

Minimum Water Supply Temp.	Maximum Water Supply Temp.
45°F	90°F

The cold water supply pressure must be within a 20 PSIG to 60 PSIG range.

Minimum Water Pressure	Maximum Water Pressure
20 PSIG	60 PSIG

Straight Reverse Osmosis (RO) treated water should never be supplied to the Ice Flaker.

RO system treated water is aggressive toward metals and plated surfaces. In addition RO water will affect the life and integrity of rubber and plastic material Ice Flaker components. If only RO water is available, Post-RO treatment must be provided to raise pH and mineral content.


Generally, filtration of cold supply water is recommended. Howe offers a complete line of replaceable core cartridge filter treatment systems designed to improve ice quality and extend the life of the Ice Flaker.

This filtration will also reduce supply water related service problems if changed at least every six months or depending upon local water conditions.

A dedicated 1/2" ODS copper cold water supply should be located within 4 feet of the Ice Flaker complete with hand shut off valve.

A 1/2" OD copper tube should connect the field installed shut off valve with the Ice Flaker water inlet connection located on the sump of the machine.

Drain Water Piping Requirements

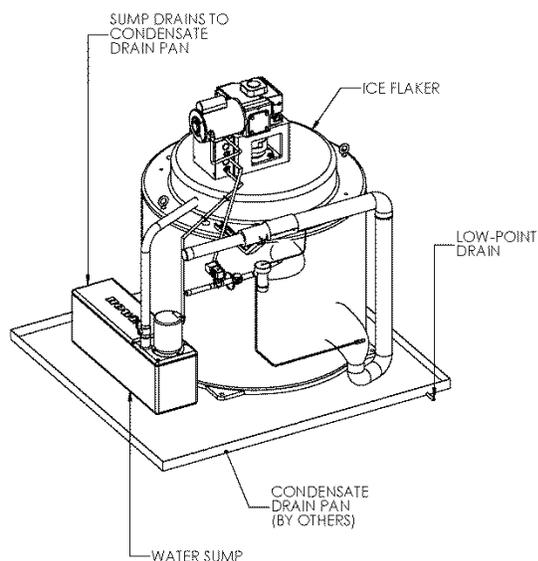

The Drain Water Piping figure above illustrates the location of the low-point drain, which is to be piped to the nearest sewer hub or trench drain.

Any vertical pipe drops should drain water through an indirect water connection with an "Air Gap". Code authorities having jurisdiction may dictate other indirect water connection requirements.

The figure depicts the Water Sump which can be drained into the Condensate Pan ensuring that the Ice Flaker does not inadvertently flow Water Sump Drain water into the Ice Bin or Carts in the event of a backup or any other malfunction.

Electrical Requirements

A dedicated power supply from a field furnished and installed disconnect switch is required for each Ice Flaker.

A separate dedicated 3 pole power supply from a field furnished and installed disconnect switch is required for each Remote Condensing Unit. The amperage of both power supply circuits must match the selected Remote Condensing Unit supplied by Howe with respect to Minimum Circuit Amperage (MCA) and Maximum Overcurrent Protection Device (MOPD) nameplate information.

A two conductor (230V) control circuit is required to interconnect the Ice Flaker with the Remote Condensing Unit interlocking relay. Additional wires are required for condensing unit annunciation. See field wiring section for details.

Ice Drop Zone Opening

The Condensate pan (by others) must have an opening equal to the evaporator opening to ensure there are no restrictions or obstructions for ice to accumulate on. The ice drop opening for the models 51-101RL ice flaker should be at least 30" diameter.

Capacity Ratings

Model Series	Nominal Capacity	Evaporating Temperature				
		-20 F / -28.8 C	-10 F / -23.2 C	-5 F / -20.4 C	0 F / -17.8 C	5 F / -15 C
51-RL	5 Tons of Ice/ 24 hrs.	6.0	5.5	5.0	4.4	3.75
76-RL	7.5 Tons of Ice/ 24 hrs.	9.0	8.25	7.5	6.6	5.62
101-RL	10 Tons of Ice/ 24 hrs.	12.0	11.0	10.0	8.8	7.5

*For optimum ice quality and production efficiency, it is recommended that all models be operated between -5°F and -10°F.

Refrigeration Requirements

Model Series	Units	Water Temperature			
		50 F / 10 C	60 F / 15.6 C	70 F / 21.1 C	80 F / 26.7 C
51-RL	BTU/HR	76,250	80,750	85,250	90,000
	cal·kg/ hr	19,220	20,350	21,490	22,680
76-RL	BTU/HR	114,500	121,250	128,000	135,000
	cal·kg / hr	28,860	30,540	32,260	34,020
101-RL	BTU/HR	152,500	161,500	170,500	180,000
	cal·kg / hr	38,430	40,700	42,970	45,360

**Refrigeration requirements are based on operating the Ice Flaker at -5°F SST and 90°F ambient air conditions. Refrigeration requirements and/or capacity will vary with temperatures outside these conditions.

Conversion Factors:

1 Ton of Refrigeration = 12,000 BTU/hr. In order to obtain Ton-R divide BTU/hr by 12,000.

1 Watt = 3.41 BTU/hr.


Howe Furnished Condensing Units

Howe furnished condensing units are properly sized for outdoor design ambient temperature and supply water temperature conditions. These condensing units are factory equipped with the following accessories:

- Interlock Relay
- Liquid Line Filter/Drier and Sight Glass
- Suction Filter
- Suction Accumulator
- Oil Separator
- Refrigerant Pump-Down Cycle
- Heated and Insulated Receiver (except for high ambient applications)
- Discus Compressor
- Condenser Fan Cycling control
- Head Pressure Control Valves (Adjustable)
Dual Valve system consisting of an adjustable ORI valve and ORD valve.

Field Furnished Condensing Units

Howe is not responsible for the performance of field furnished condensing units. Howe recommends field furnished condensing units be sized with sufficient refrigeration capacity at the local design outdoor ambient temperature including enough system capacity to offset suction line pressure losses. Howe also recommends field furnished condensing units be at least equipped with the accessories outlined in the previous section to ensure successful operation of the Ice Flaker.

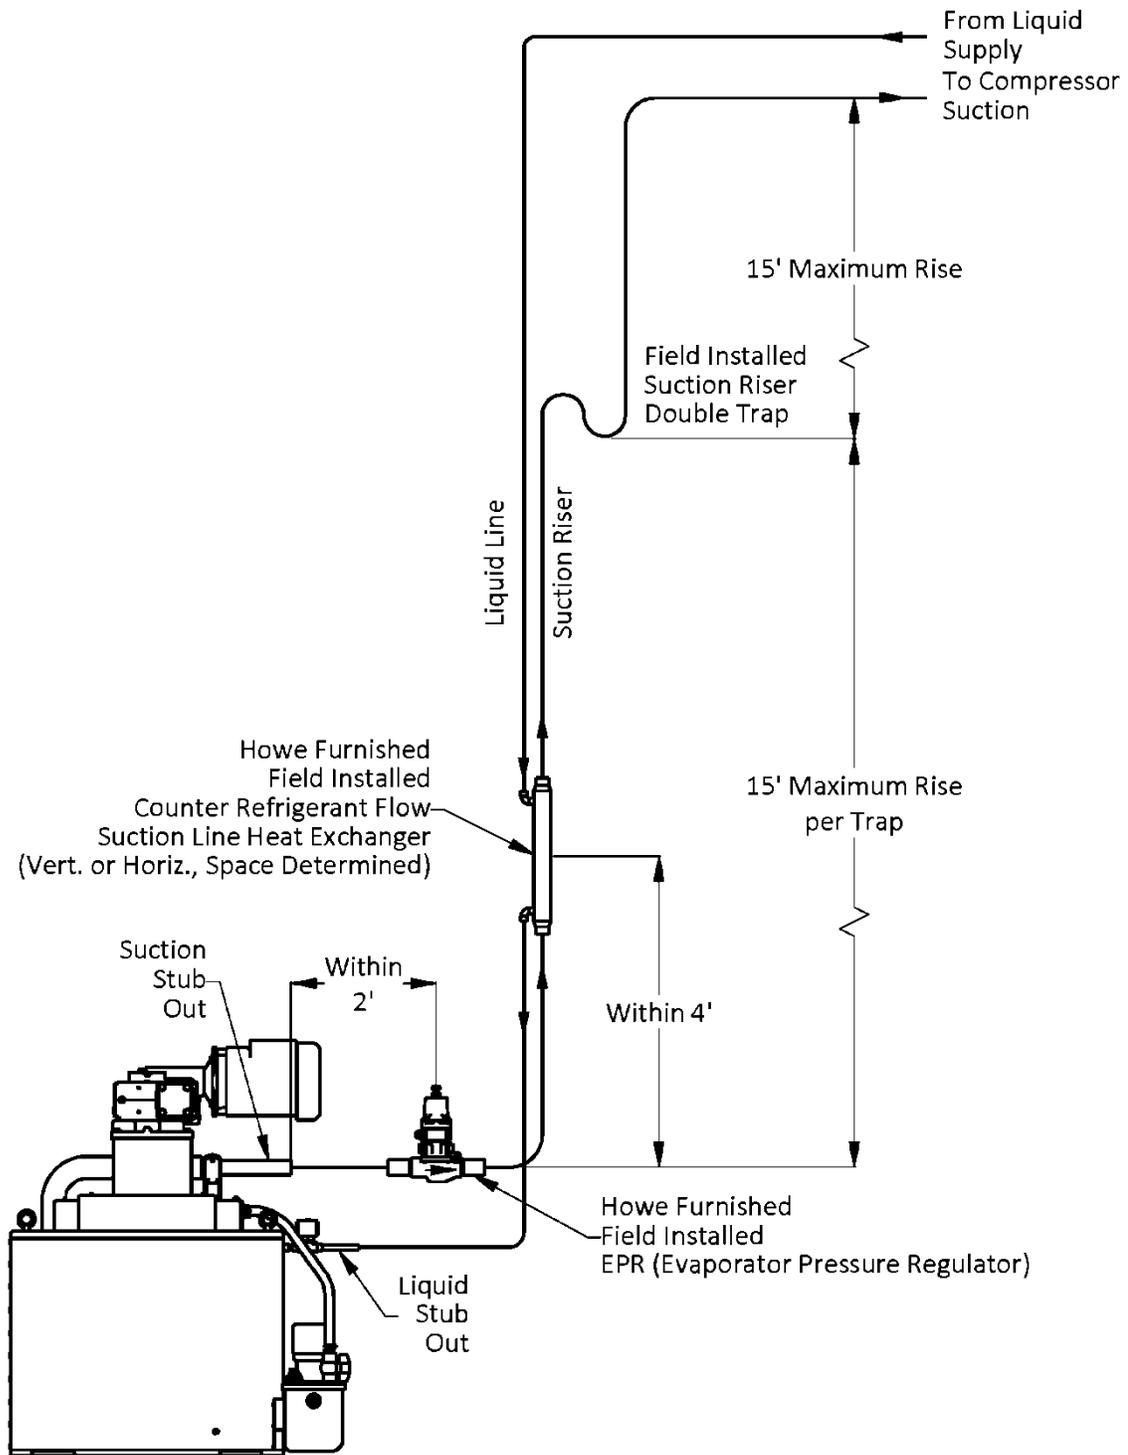

SUGGESTED REFRIGERANT PIPING DIAGRAM

Figure 1

Piping Table

Model	Liquid Line*	Suction Line*	Suction Riser*
51-RL	7/8" ODS	2-1/8" ODS	1-5/8" ODS
76-RL	7/8" ODS	2-1/8" ODS	1-5/8" ODS
101-RL	1-1/8" ODS	2-5/8" ODS	2-1/8" ODS

*For runs up to 150 feet. If longer, use next larger line size.

Refrigerant Pipework

Howe recommends the field refrigerant piping be installed according to the Suggested Refrigerant Piping Diagram shown on previous page. These pipe sizes are for HFC refrigerants and are not applicable to R-744 installations or secondary refrigerant applications.

Howe recommends the use of hard drawn ACR type L tubing with refrigeration grade wrought copper long radius elbows and fittings only. No soft drawn tubing should be used in the refrigerant pipe installation.

No field installed P-type oil trap is required at the base of the suction riser since all Ice Flakers are internally piped with a suction trap at the outlet of the evaporator.

Evaporator Pressure Regulator (EPR) valves must be field installed with the arrow correctly pointing in the direction of flow.

Installation specifications should require all refrigerant piping should be joined with a suitable silver brazing alloy while purging nitrogen through the piping to prevent copper oxidation scale from forming inside the tubing.

For close coupling Ice Flaker to Condensing Unit, use a minimum of ten feet total straight length of pipe. Minimize bends and fittings. Suction Line to include EPR and Heat Exchanger.

Refrigerant Pipework Insulation Requirements

Field refrigerant pipework should be insulated with closed cell flexible elastomeric foam thermal insulation intended for cold applications.

Liquid lines should be covered with 1/2" thick and suction lines with 3/4" thick material.

The insulation material should be moisture vapor resistant when correctly installed according to the manufacturer's instructions.

The field installed Evaporator Pressure Regulator (EPR) valve and Suction Line Heat Exchanger must likewise be insulated. If these system components are left un-insulated they become "thermal bridges" and unwanted condensation and ice will form and drip.

All butt joints and seams must be properly field fabricated according to the insulation manufacturer's fusing adhesive instructions.

Self-adhering closed cell foam insulation is also available in rolls and can be used to supplement the conventional tubular materials on irregular shapes, EPR valves, and caps.

Field Installation

Safety Information and Guidelines

Only qualified service technicians should attempt to install, service, or maintain the Ice Flaker.

Make sure all power sources are disconnected before any service work is done to the Ice Flaker.

All field wiring must conform to the requirements of the equipment and all applicable local codes and national codes.

Always refer to the Condensing Unit manufacturer's installation manual for further specification and guidance.

Inspection

Upon receipt, check all items against the bill of lading to make sure all crates and cartons are accounted for.

Any shortage or damages should be reported to the delivering carrier. Damaged material becomes the delivering carrier's responsibility and should not be returned to the manufacturer unless prior approval is given.

Take care not to damage equipment when uncrating.

Condensing Unit Rigging and Mounting

Rigging holes are provided on all units. Caution should be exercised when moving these units. To prevent damage to the unit housing during rigging, cables or chains used must be held apart by spacer bars. The mounting platform or base should be level and located so as to permit unrestricted air flow.

Ground Mounting

Concrete slab raised six inches above ground level provides a suitable base. Raising the base above ground level provides some protection from ground water and wind-blown matter. Before tightening mounting bolts, recheck level of unit. The unit should in all cases be located with a clear space in all directions that is at a minimum, equal to the height of the unit above the mounting surface. A condensing unit mounted in a corner formed by two walls, may result in discharge air recirculation with resulting loss of capacity.

Roof Mounting

Due to the weight of the units, a structural analysis by a qualified engineer may be required before mounting. Roof mounted units should be installed level on steel channels or an I-beam frame capable of supporting the weight of the unit.

Access

Provide adequate space at the compressor end of the unit for servicing. Provide adequate space on the connection side to permit service of components.

Piping

The Ice Flaker has been thoroughly cleaned and dehydrated at the factory. However, foreign matter may enter the system by way of the piping to the condensing unit. Therefore, care must be used during installation of the piping to prevent entrance of foreign matter.

Install all refrigeration system components in accordance with applicable local and national codes and in conformance with good practice required for the proper operation of the Ice Flaker.

The refrigerant pipe size should be selected from the Piping Table. The interconnecting pipe size is not necessarily the same as the stub-out on the condensing unit or the Ice Flaker.

The following procedures should be followed:

1. Do not leave units or piping open to the atmosphere any longer than is absolutely necessary.
2. Use only refrigeration grade copper tubing, properly sealed against contamination.
3. Suction lines should slope 1/4" per 10 feet towards the compressor.
4. Refer to the Suggested Refrigerant Piping Diagram (p.7) for suitable P-type oil trap locations to enhance oil return to the compressor.
5. When brazing refrigerant lines, Dry Nitrogen should be passed through the line at low pressure to prevent scaling and oxidation inside the tubing.
6. Use only a suitable silver solder alloy on suction and liquid lines.

Leak Testing

After all refrigerant connections are made, the entire system must be leak tested.

The complete system should be pressurized to no more than 150 psig when performing leak testing.

It is recommended that this pressure be held for a minimum of 12 hours and then rechecked. For a satisfactory installation, the system must be leak tight.

Field Wiring

All field wiring must be in compliance with local and national codes by a qualified electrician. Use only copper conductors of the appropriate size.

An electrical Control Panel is shipped loose with all Ice Flakers and should be wall-mounted near the Ice Flaker for easy access. Refer to supplied wiring schematic for specific reference.

1. Connect the following between the Control Panel and the Condensing Unit.
2. 10 ton unit may have two compressor circuits. (18 wires total)

	Component	Control Panel	Condensing Unit
	Pump Down	A	A
		B	B
Compressor 1	Compressor Run	1	4
		2	11
	Suction Pressure	3	3
		4	5
	Oil Pressure	5	1
		6	11
High Discharge	7	2	
	8	6	
Compressor 2	Compressor Run	9	16
		10	21
	Suction Pressure	11	15
		12	17
	Oil Pressure	13	13
		14	21
High Discharge	15	14	
	16	18	

3. Connect the leads from the Photo Eye sensors to the terminals mark “Blue”, “Black”, and “Brown” in the Control Panel (see p.28).

Evacuation

Do not use the refrigeration compressor to evacuate the system. Do not start the compressor while it is in a vacuum.

A good, deep vacuum pump should be connected to both the low and high side evacuation valves with copper tube or high vacuum hoses (1/4" ID minimum).

If the compressor has service valves, they should remain closed.

A deep vacuum gauge capable of registering pressure in microns should be attached to the system for pressure readings.

A shut off valve between the gauge connection and vacuum pump should be provided to allow the system pressure to be checked after evacuation.

Do not turn off vacuum pump when connected to an evacuated system before closing shut off valve.

The vacuum pump should be operated until a pressure of 1,500 microns absolute pressure is reached – at which time the vacuum should be broken with the refrigerant to be used in the system through a drier until the system pressure rises above "0" psig.

Refrigerant used during evacuation cannot be vented. Reclaim all used refrigerant.

Repeat this operation a second time.

Open the compressor service valves and evacuate the entire system to 500 microns absolute pressure. Raise the pressure to 2 psig with the refrigerant and remove the vacuum pump.

Refrigerant Charging Instructions

All Ice Flakers are shipped with a small holding charge of dry nitrogen. Ice flakers must be evacuated before charging.

1. Install a liquid line drier in the refrigerant supply line between the service gauge and the liquid service port of the receiver. This extra drier will ensure that all refrigerant supplied to the system is clean and dry.
2. When initially charging a system that is in a vacuum, liquid refrigerant can be added directly into the receiver tank.
3. The approximate refrigerant charge is listed in the table below. Do not over charge.

Model	System Charge ¹	Piping Charge ²
51-RL	81	21.2
76-RL	123	21.2
101-RL	188	36.1

¹ System Charge is approximate pounds of R-404a for Ice Flaker and Condensing Unit only.

² Piping Charge is approximate additional pounds refrigerant per 100 linear feet of liquid line.


4. Start the system and finish charging until the sight glass indicates a full charge and the proper amount has been weighed in. If refrigerant must be added to the system through the suction side of the compressor, charge in vapor form only.

Installation Checklist

- 1. Has the ambient temperature been verified between 50°F – 100°F?**
(see Location Requirements p.3)
- 2. Has the incoming water temperature been verified between 45°F – 90°F?**
(see Water Supply Requirements p.3)
- 3. Has the water supply pressure been verified between 20 PSIG and 60 PSIG?**
(see Water Supply Requirements p.3)
- 4. Has the filtered water supply been verified as not RO water?**
(see Water Supply Requirements p.3)
- 5. Has the Ice Flaker been located near a floor sanitary sewer drain?**
(see Drain Water Piping Requirements p.4)
- 6. Have the EPR and Suction Line Heat Exchanger been installed correctly?**
(see Suggested Refrigerant Piping Diagram p.7)
- 7. Have all the refrigeration lines been sufficiently insulated?**
(see Refrigerant Pipework Insulation Requirements p.8)
- 8. Has the Condensing Unit been mounted properly?**
(see Condensing Unit Rigging and Mounting p.9)
- 9. Has the system been leak tested properly?**
(see Leak Testing p.10)
- 10. Have the Photo Eye sensors been connected?**
(see Field Wiring p.11)
- 11. Has the system been evacuated properly?**
(see Evacuation p.12)
- 12. Has the system been charged properly?**
(see Refrigerant Charging Instructions p.12)

Start Up and Operation

Water Operation

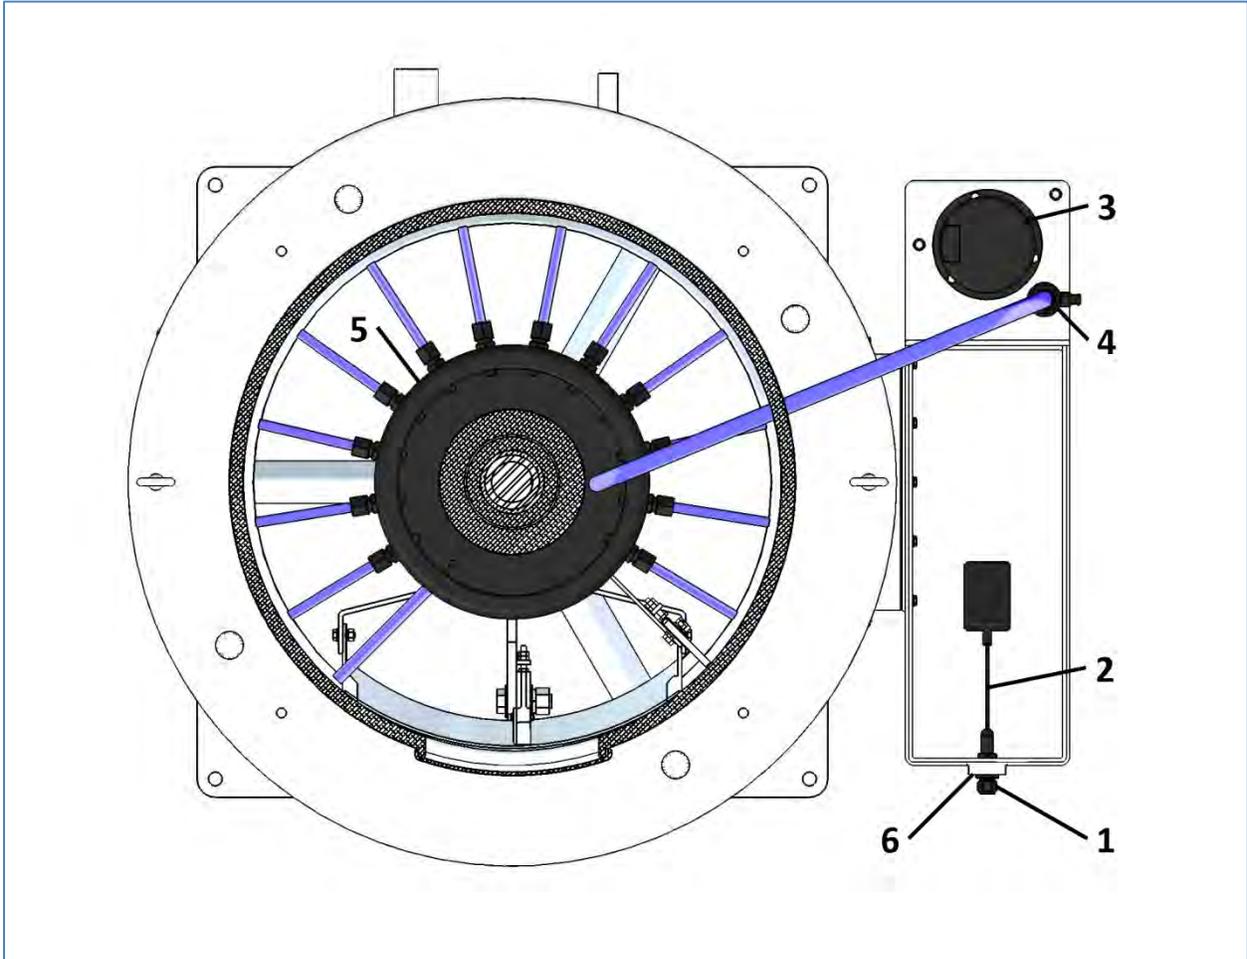

- 1. Water Inlet Connection
- 2. Float Valve
- 3. Water Pump
- 4. Water Regulating Valve
- 5. Water Distribution Pan & Side Spouts
- 6. Sump Connections

Water Inlet


The supply water feed for the Ice Flaker must be connected here. A shut-off valve should be field installed before this connection.

The Ice Flaker requires a minimum water pressure of 20 PSIG and a maximum of 60 PSIG.

Float Valve


The water level in the Water Sump is regulated by the Float Valve.

The water level should always be below the opening on the side of the Water Sump.

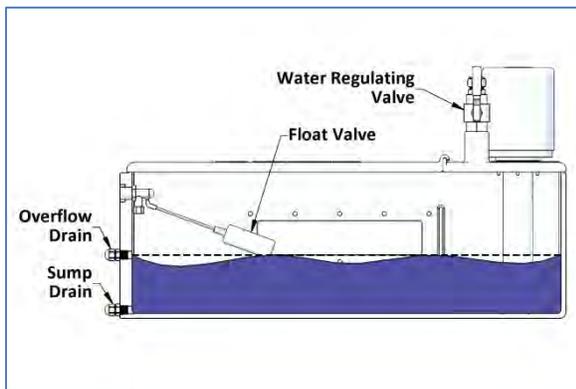

Section View of Water Sump

Water should never be allowed to flow from the Water Sump back through the opening and into the Bottom Casting.

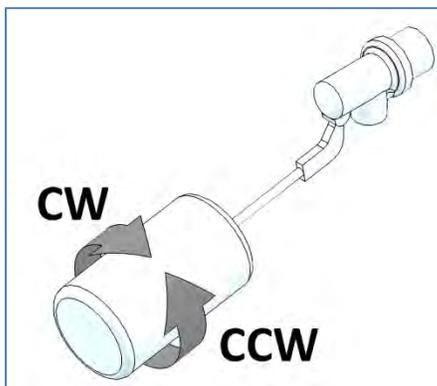

Adjust the water level by rotating the float end of the Float Valve. Rotate clockwise to raise the water level and counterclockwise to lower the water level.

Water Pump

The Water Pump drives the water in a continuous flow through the system.

The Water Pump inlet should be submerged at all times. Air should never be pulled into the intake.

Overflow Drain

The higher of the two drain connections on the Water Sump is the Overflow Drain.

If water is exiting the Water Sump through the Overflow Drain, the water level is too high and the Float Valve needs to be adjusted.

Sump Drain

The lower of the two is the Sump Drain. It is used to flush the Water Sump of all liquid.


Water Distribution Pan

The Water Distribution Pan circulates the water fed from the Water Pump down the walls of the Evaporator.

There are two small tabs on the bottom of the Water Distribution Pan. These tabs should straddle the wing of the Ice Blade to prevent it from rotating.

The tube exiting the Water Distribution Pan from the bottom is the Lead Spout. It must always be flowing with water during normal operation and pointing perpendicular to the evaporator surface.

Do not plug or cap the bottom Lead Spout.

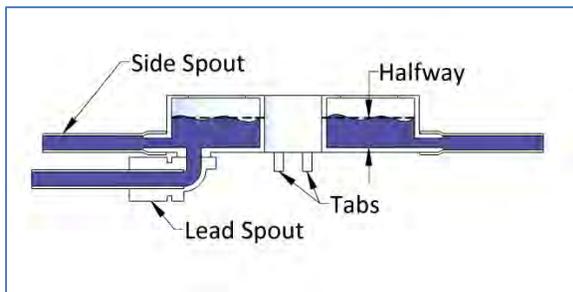

Section View of Water Distribution Pan


Water level in the Water Distribution Pan should be about halfway full. The Side Spouts should never be starved of water.

Water Regulating Valve

Adjust the water level in the Water Distribution Pan by opening or closing the Water Regulating Valve located directly above the Water Sump.

Only adjust the Water Regulating Valve after the Ice Flaker has been producing ice for at least 10 minutes.

Refrigeration Operation

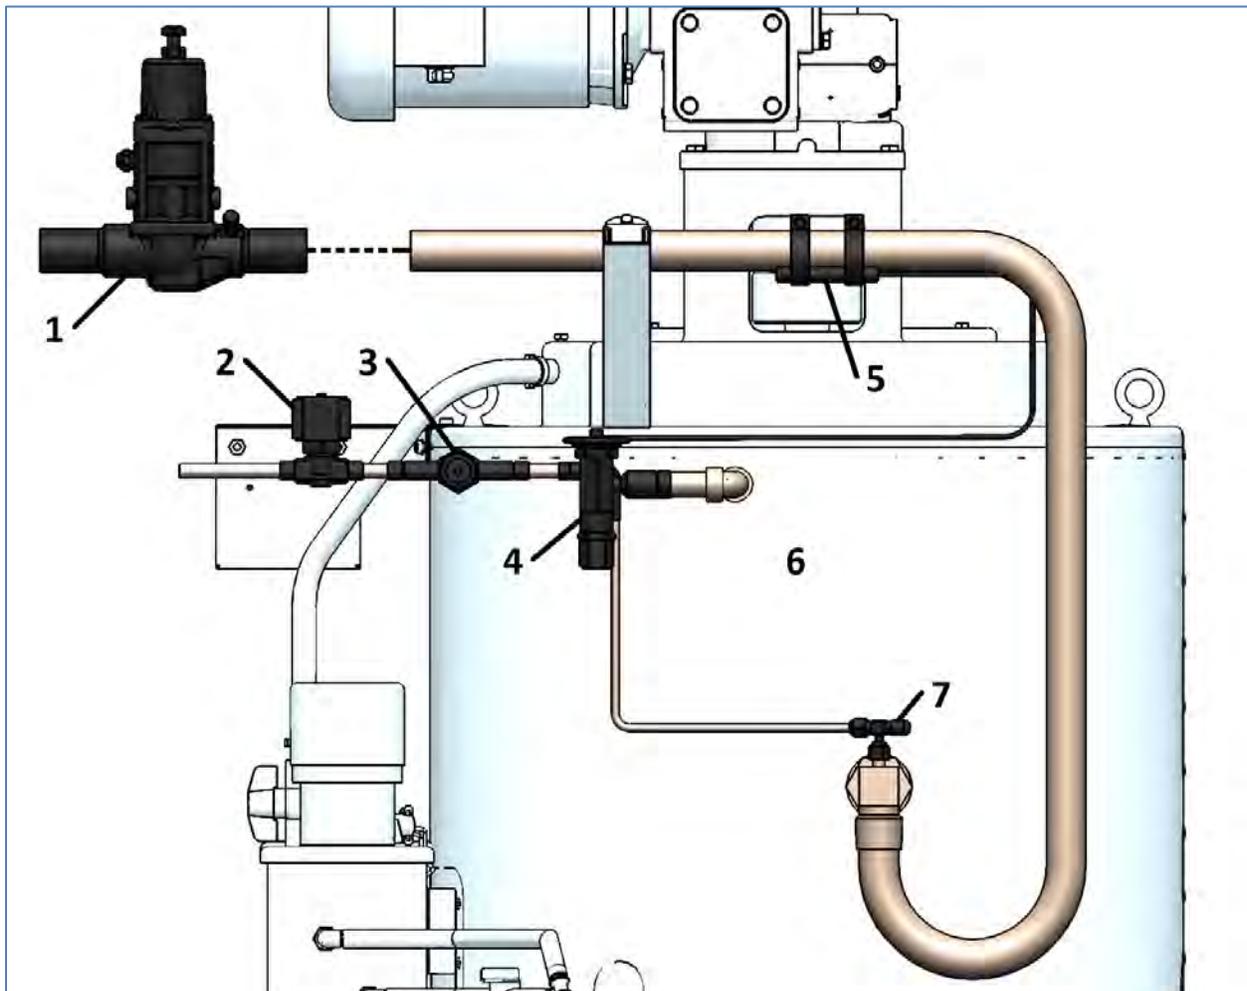

*Piping insulation not shown

- | | |
|--|---------------------|
| 1. Evaporator Pressure Regulator (EPR) | 5. TXV Sensing Bulb |
| 2. Solenoid Valve | 6. Evaporator |
| 3. Sight Glass | 7. Pressure Tap |
| 4. Thermostatic Expansion Valve (TXV) | |

Evaporator Pressure Setting

Model	Temperature	R-404A	R-507
51-RL	-5°F	28 PSI	30 PSI
76-RL	-5°F	28 PSI	30 PSI
101-RL	-5°F	28 PSI	30 PSI

Evaporator Pressure Regulator (EPR)


The EPR will hold the suction temperature at the proper level, allowing for minor adjustments to be made using the Thermostatic Expansion Valve (TXV).

Even though the suction temperature at the Evaporator is correct, the TXV may still be underfeeding or overfeeding.

All EPRs are shipped loose and must be field installed. The EPR should ideally be located within 2 feet of the Ice Flaker.

To read EPR setting install service manifold at the Pressure Tap of the Evaporator or at the inlet of the EPR.

For Globe Style EPR, adjust top stem.

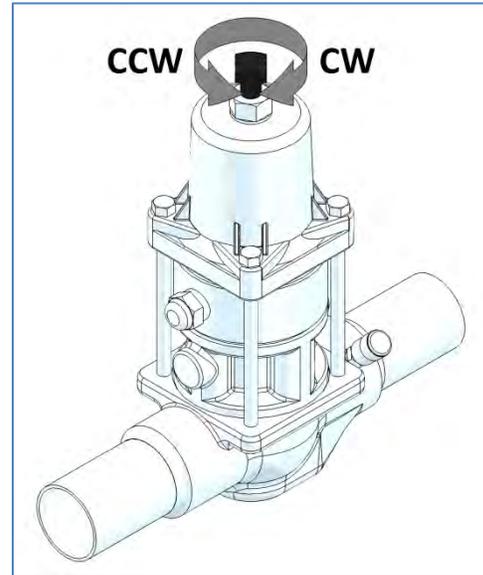

To increase the pressure setting, rotate clockwise.


To decrease the pressure setting, rotate counter-clockwise.

If EPR fails to regulate pressure properly it must be repaired or replaced.

To ensure an accurate setting, it is important to set the EPR when the ambient temperature at the Condensing Unit is 10°F below the maximum rated ambient temperature.

Thermostatic Expansion Valve (TXV)

Always adjust the EPR prior to adjusting the TXV.

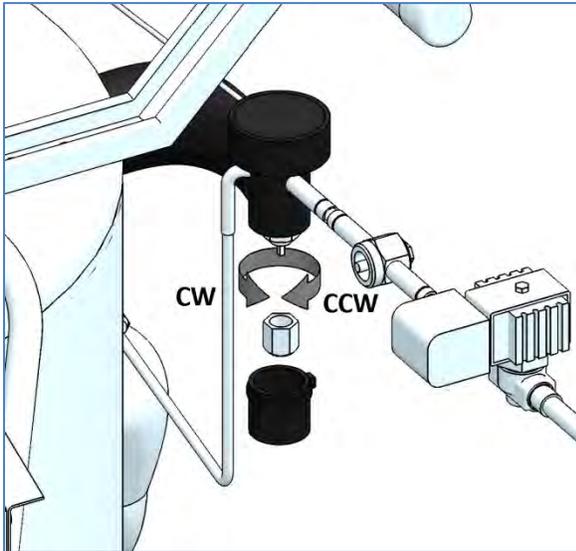


Superheat is not a reliable method of adjusting TXV on Ice Flaker. TXV must be adjusted while visually inspecting the Evaporator's freezing surface.

To increase the refrigerant feed of the TXV, rotate stem counterclockwise.

To decrease the refrigerant feed of the TXV, rotate stem clockwise.

TXV Sensing Bulb

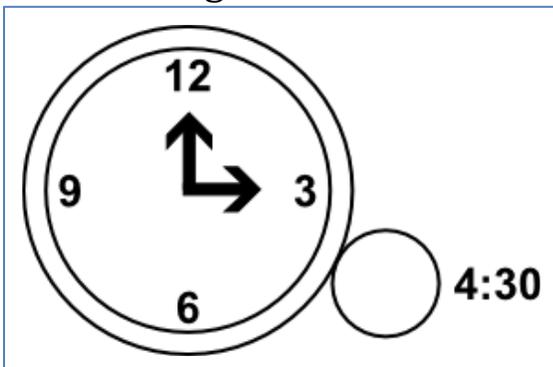

Bulb placement should be at the 4:30 position of a clock on the suction line.

Adjusting Refrigeration to the Ice Flaker

1. Visually inspect the frost pattern on the freezing surface of the Evaporator.

If the TXV is underfeeding, the top of the frost pattern will be a milky white color and the bottom will be clear, soft, and not harvest properly.



TXV Underfeeding

2. If the TXV is not underfeeding, close the TXV by 1/4 of a turn and wait 5 minutes.
3. Visually inspect the frost pattern of the Evaporator.
4. Repeat steps #2 and #3 until underfeeding can be seen at the very bottom of the Evaporator.
5. Now, open the TXV by 1/4 of a turn and wait 5 minutes.
6. Repeat step #5 until the entire frost pattern of the Evaporator becomes milky white and harvests completely.
7. Confirm correct EPR setting. (see p.18)

Solenoid Valve

The Solenoid Valve controls the flow of liquid refrigerant to the Evaporator.

The Solenoid Valve should energize immediately upon starting the Ice Flaker.

The Solenoid Valve should only de-energize when the Ice Flaker is in Off-Delay Cycle (p.23) or Overload Condition (p.24).

Sight Glass

The Sight Glass provides a quick way to visually check that the Ice Flaker is being provided with constant liquid refrigerant and that there is no moisture in the system.

There should never be bubbles in the Sight Glass. This indicates a flashing or inconsistent liquid feed.

The moisture indicator in the middle of the Sight Glass should always be green.

- Green – Dry
- Yellow – Wet


Fan Cycling Control

On Dual-Fan Condensing Units, the lead fan or bank of fans is always on when the Condensing Unit is operating. The second fan or bank of fans is controlled by an ambient switch, which should be set at 50°F.

Head Pressure control


The system employs an ORI (open on rise of inlet pressure) valve and an ORD (open on rise of differential pressure) valve. The high pressure discharge gas is introduced above the liquid in the receiver tank. The receiver discharge is regulated by the ORI valve.

The discharge pressure of the ORI valve must be adjusted to regulate the unit for proper operating conditions. Adjust the ORI valve shown on the following diagram to maintain a discharge pressure of 150 PSIG.

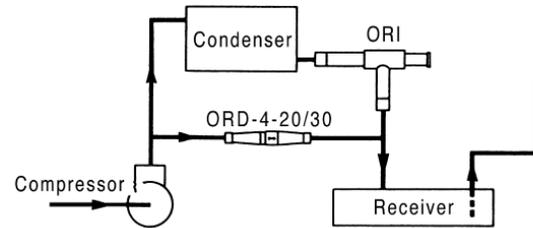

Low Pressure Control

All Howe Condensing Units are supplied with a separate Low Pressure Control for continuous pump down.

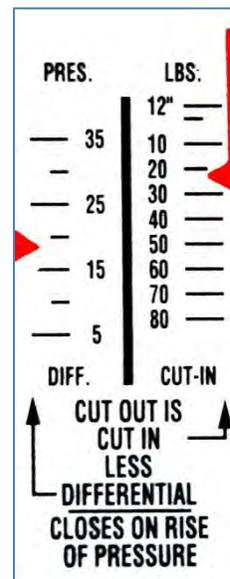

The left side of the control indicates pressure differential for Cut-Out (compressor off) and the right side indicates pressure for Cut-In (compressor on).

R-404A	
Diff. / Pres.	Cut-In / LBS.
18	23

The table above shows the approximate setting for the low pressure control. When adjusting the pressure control set points, it is important to use a pressure gauge set for setting the cut-in and differential setpoints. The scale on the pressure switch is not accurate enough to reliably set the cut-in or differential set points.

Field Capacity Check

The Ice Flaker is a continuous production machine and makes ice at a steady rate once stabilized.

A Capacity Check confirms the Ice Flaker and refrigeration settings are correct.

1. Choose an appropriately sized container and weigh it while empty.

Container Weight _____ Lbs.

2. Run the Ice Flaker for 10 minutes.
3. Position the container below the opening of the Ice Flaker.
4. Catch the falling ice in the container for exactly 15 minutes. Be sure that the container catches all of the ice.
5. Weigh the ice and the container together in pounds using an accurate scale. Do not drain before weighing.

Measured Weight _____ Lbs.

6. Subtract the weight of the container.

Measured Weight		(from #5)
- Container Weight	-	(from #1)
<hr style="border: 0.5px solid black;"/>		
= Calculated Weight	=	Lbs.

7. Calculate the capacity by multiplying the calculated weight by 96.

Calculated Weight		(from #6)
x 96	x	96
<hr style="border: 0.5px solid black;"/>		
= Capacity	=	Lbs. per

_____ 24 hrs.

8. Compare the number with the rated capacity of the Ice Flaker. Keep in mind temperatures outside the rated conditions will have an effect on the capacity.

Electrical Operation



- | | |
|-------------------------|------------------------------|
| 1. Motor Contactor (M1) | 4. Fuses (FU1 & FU2) |
| 2. Control Module (CM) | 5. Water Pump Relay (R1) |
| 3. Transformer (T1) | 6. Level Control Relay (LC1) |



- | | |
|--------------------------------------|---|
| 1. Term 1: 24V Input Power | 7. Term 7: Solenoid Valve Contact |
| 2. Term 2: 24V Input Power | 8. Term 8: Solenoid Valve Contact |
| 3. Term 3: Control Signal | 9. Off-Delay Setting |
| 4. Term 4: Motor Overload Reset | 10. Motor Overload Setting |
| 5. Term 5: Motor Overload Switch Leg | 11. Overcurrent Condition Indicator Light |
| 6. Term 6: Ice Flaker Run Switch Leg | 12. Overload Sensing Coil |

Level Control Relay (LC1)

This relay processes the signal from the Photo Eyes. It shuts the Ice Flaker off when the Ice Bin is full to prevent damage caused by ice backing up into the evaporator section.

Motor Contactor (M1)

This relay provides power to the Drive Motor, the Water Pump, and the Solenoid Valve. It features a manual override button, which when depressed will engage the relay contacts, even when the relay coil is not energized.

Transformer (T1)

This provides 24 volt control power to the Control Module, Motor Relay, and indicating lights.

Water Pump Relay (R1)

This relay closes the Solenoid Valve in the event that power is unexpectedly lost to the Water Pump.

Fuses (FU1 & FU2)

The (FU1) fuses control the Water Pump and (FU2) fuses control the Rib Heaters. (FU2) fuses may not be present if the Ice Flaker is not equipped with the Low Ambient Kit option.

Ice Flaker Run Indicator Light

This is lit green during Normal Operation.

Motor Overload Indicator Light

This is lit amber when Ice Flaker is in Overload Condition. The Reset Button is a normally open switch, which resets the circuit after an Overload Condition.

Control Module (CM)

The control Module features eight wire terminals, two adjustable dials, and one indicating light.

It operates in one of three main modes:

- Normal Operation
- Off-Delay Cycle
- Overload Condition

Normal Operation

Normal Operation begins when the Control Module senses voltage at the Control Signal (Term 3).

During Normal Operation voltage is present at Ice Flaker Run Switch Leg (Term 6) and the Solenoid Valve Contacts (Term 7 & 8) are closed.

Off-Delay Cycle

The Off-Delay Cycle begins when voltage is removed from the Control Signal (Term 3).

The length of the Off-Delay Cycle is determined by the blue Off-Delay Setting dial. The increments are in minutes with 1 being the lowest possible setting and 30 being the highest.

During the Off-Delay Cycle voltage is present at Ice Flaker Run Switch Leg (Term 6) until the time setting has been met. The Solenoid Valve Contacts (Term 7 & 8) are opened when the Off-Delay Cycle is initiated.

Off-Delay Setting

Under Normal Operation the Off-Delay Setting should be adjusted to run approximately 2 minutes after the Solenoid Valve shuts off the refrigeration to the Ice Flaker.

For proper adjustment, turn knob counterclockwise until it stops. Then turn clockwise 1/8 turn and stop.

The 30 minute setting is used for Cleaning Procedure only.

Overload Condition

An Overload Condition begins when the Overload Sensing Coil reads amperage from the motor lead passing through it that is higher than the Motor Overload Setting.

During an Overload Condition no voltage is present at Ice Flaker Run Switch Leg (Term 6), the Solenoid Valve Contacts (Term 7 & 8) are open, and the Overcurrent Condition Indicator Light is lit red.

The Motor Overload setting should be adjusted on start-up and anytime changes are made to the Drive Motor or Main Shaft.


Motor Overload Setting

The proper adjustment of Motor Overload Setting will protect the Ice Flaker and help avoid nuisance service calls.

To set the Motor Overload correctly,

1. Mark the location of the setscrew before an adjustment is made, as a point of reference.
2. Place a small flat blade screwdriver in the adjustment screw while the Ice Flaker is operating.
3. Then gently and slowly turn counterclockwise until Overload Condition Indication Light illuminates. Do not force adjustment screw past bottom stop.
4. Then turn adjustment screw clockwise 1 hash mark and stop.
5. Press the reset button to start the Ice Flaker again.

460/3/60 & 575/3/60 control panel

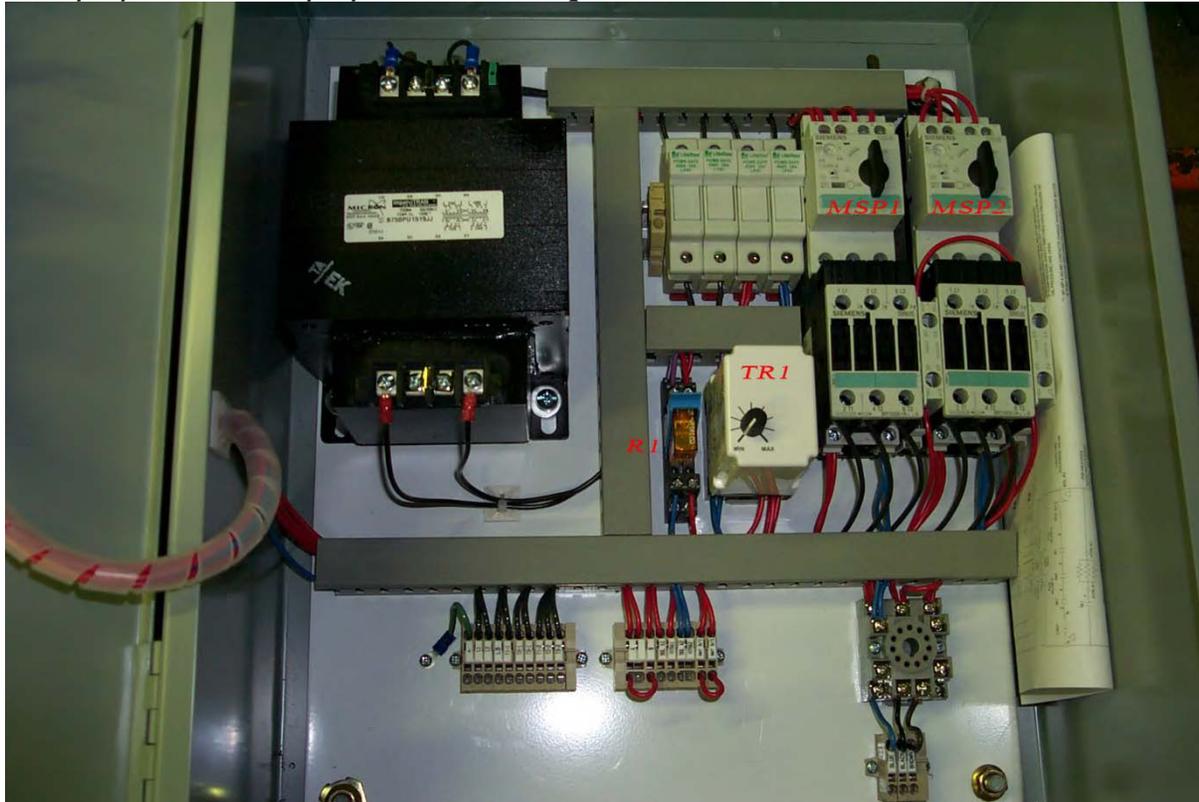

Level Control Relay (LC1)

This relay processes the signal from the Photo Eyes. It shuts the Ice Flaker off when the Ice Bin is full to prevent damage caused by ice backing up into the evaporator section.

Drive Motor Contactor (MSP1)

This relay provides power to the Drive Motor and the Solenoid Valve. It features a manual override button, which when depressed will engage the relay contacts, even when the relay coil is not energized.

Water Pump Contactor (MSP2)

This relay provides power to the Water Pump and the Solenoid Valve. It features a manual override button, which when depressed will engage the

relay contacts, even when the relay coil is not energized.

Transformer (T1)

This provides 24 volt control power to the Control Module, Motor Relay, and indicating lights.

Run Circuit Relay (R1)

This relay energizes when the ice flaker should run. All the on-off devices are wired in series to energize this relay. Opening of ANY control will initiate the shut-down (pump out) sequence of the ice flaker. All controls (on-off switch, ice level control, clock timers) must be closed to allow the unit to start up.

Fuses (FU1 & FU2)

The (FU1) fuses protect the Primary side of the transformer, (FU2) fuses protect the secondary side of the transformer, (FU3) protect the (optional) low ambient rib Heaters. (FU3) fuses may not be present if the Ice Flaker is not equipped with the Low Ambient Kit option.

Ice Flaker Run Indicator Light

This is lit green during Normal Operation.

Motor Overload Indicator Light

This is amber light is illuminated when Ice Flaker drive motor or water pump is in Overload Condition. The overload reset switch is inside the control box on the corresponding contactor. Turning the switch resets the circuit after an Overload Condition.

Off delay timer (TR1)

Normal Operation

Normal Operation begins when the R1 relay is energized.

During Normal operation the output of the timer is closed.

Off-Delay Cycle

The Off-Delay Cycle begins when The R1 relay is de-energized.

The length of the Off-Delay Cycle is determined by the Off-Delay setting dial. The increments are in minutes with 1 being the lowest possible setting and 30 being the highest.

During the Off-Delay Cycle the timer will keep the motor and pump contactors energized until the time setting has been met. The Solenoid Valve will immediately de-energize when the Off-Delay Cycle is initiated.

Off-Delay Setting

Under Normal Operation the Off-Delay Setting should be adjusted to run approximately 2 minutes after the Solenoid Valve shuts off the refrigeration to the Ice Flaker.

The 30 minute setting is used for Cleaning Procedure only.

Overload Condition

An Overload Condition begins when the internal Overload device reads amperage from the motor load is higher than the Motor Overload Setting.

During an Overload Condition of either the drive motor or the water pump, power is interrupted to coils of both the motor contactor and the pump contactor, and the corresponding overcurrent condition Indicator red Light is illuminated.

The Motor Overload setting should be adjusted on start-up and anytime changes are made to the Drive Motor or Main Shaft.

Motor Overload Setting

The proper adjustment of Motor Overload Setting will protect the Ice Flaker and help avoid nuisance service calls.

To set the Motor Overload correctly,

6. Mark the location of the setscrew before an adjustment is made, as a point of reference.

7. Place a small flat blade screwdriver in the adjustment screw while the Ice Flaker is operating.
8. Then gently and slowly turn counterclockwise until Overload Condition Indication Light illuminates. Do not force adjustment screw past bottom stop.
9. Then turn adjustment screw clockwise 1 hash mark and stop.
10. Press the reset button to start the Ice Flaker again.

Photo Eyes (Level Control)


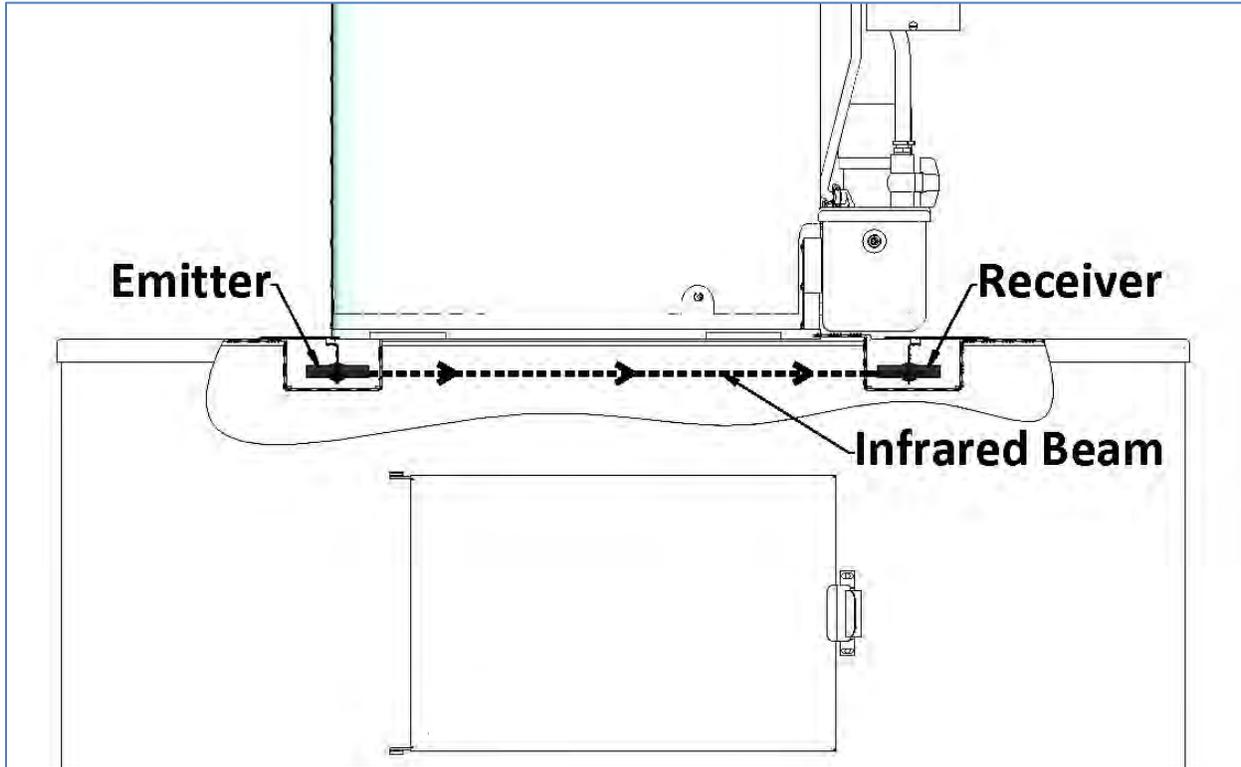


Photo Eye Wiring

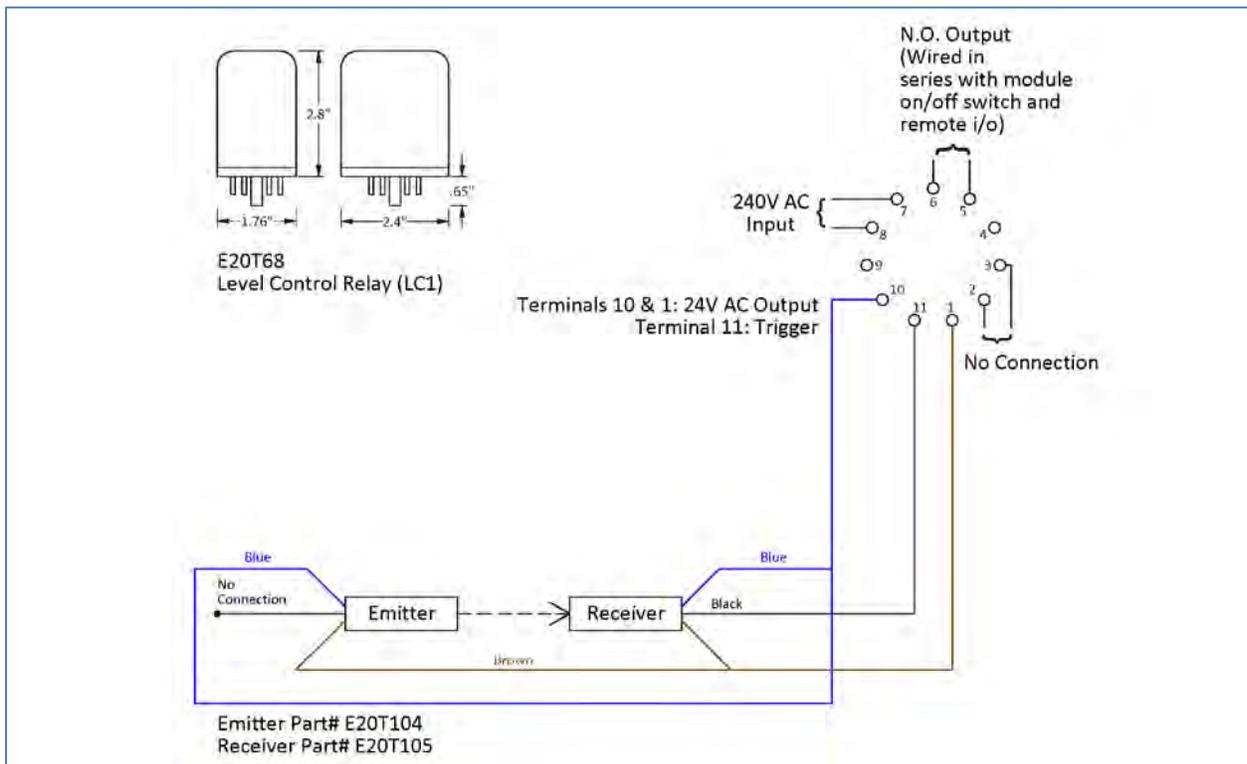

The Photoelectric sensors, or Photo Eyes, shoot an infrared beam across the opening of the Ice Flaker.

If this beam is interrupted for more than 15 seconds, the Ice Flaker will begin the Off-Delay Cycle. This prevents ice from filling into the ice making area and damaging internal parts.

The Ice Flaker will return to Normal Operation when the infrared beam is re-established, provided the Off-Delay Cycle has completed.

If the Ice Flaker was purchased without an Ice Bin the Photo Eyes will be shipped loose and need to be properly mounted by the installing contractor. Please contact Howe for further information.

Correct Wiring Arrangement

The Emitter should have only the blue & brown wires connected to it. The black lead has no connection and should not be wired to the Level Control Relay (LC1).

The Receiver should have the blue, brown & black wires connected.

Correct Voltage

With Level Control Relay plugged in and power to Ice Flaker on, remove wire leads from the Emitter and the Receiver.

Use a voltmeter to verify 24 volts across Blue and Brown terminals.

Alternatively you can check terminals #1 and #10 on the Level Control Relay.

If 24 volts is not present, the Level Control Relay has likely failed and needs to be replaced.

Sequence of Operation

There are Light-Emitting Diode (LED) indicators on the rear of both the Emitter & Receiver.

The Emitter has a green LED, which is illuminated whenever the Ice Flaker has power.

The Receiver has two LEDs. The green LED is always illuminated whenever the Ice Flaker has power. The amber LED is illuminated when it “sees” the infrared signal from the Emitter.

During Normal Operation, all LEDs should be lit. The Level Control Relay (LC1) should open the Solenoid Valve, and the Ice Flaker should begin making ice.


When the infrared beam is blocked, both green LEDs will remain lit. However, the amber LED on the Receiver will go out.

After 15 seconds of the beam being blocked, the Solenoid Valve will de-energize and the Off-Delay Cycle will begin.

Depending upon the adjustment of the Off-Delay Setting, the Driver Motor and Water Pump will continue to operate for between 2 – 30 minutes.

If the Photo Eyes do not operate in this fashion, please consult the Troubleshooting section.

Mechanical Operation

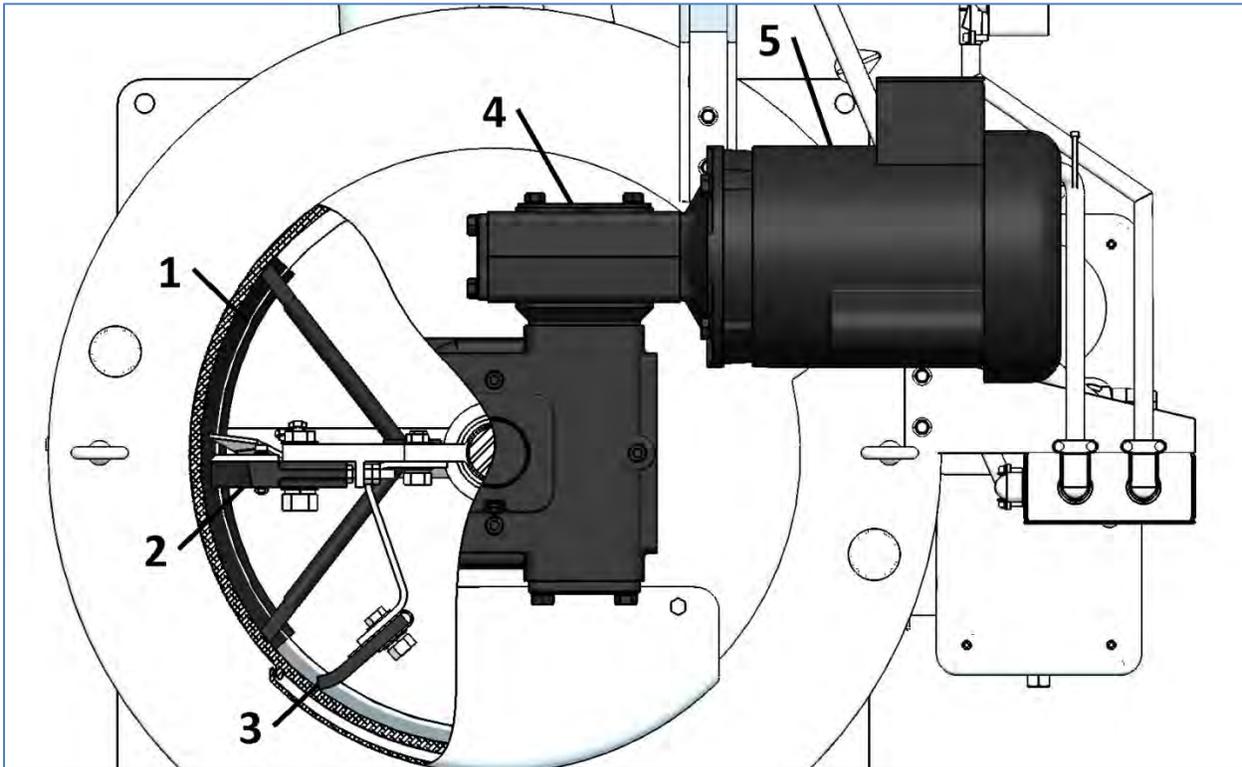


1. Ice Deflector
2. Ice Blade
3. Squeegee

4. Speed Reducer
5. Drive Motor

Ice Deflector

The Ice Deflector prevents ice from dropping into the water return trough.

A properly installed Ice Deflector should have the top outer edge positioned outside of the ice drop zone to ensure all falling ice will hit the Ice Deflector.

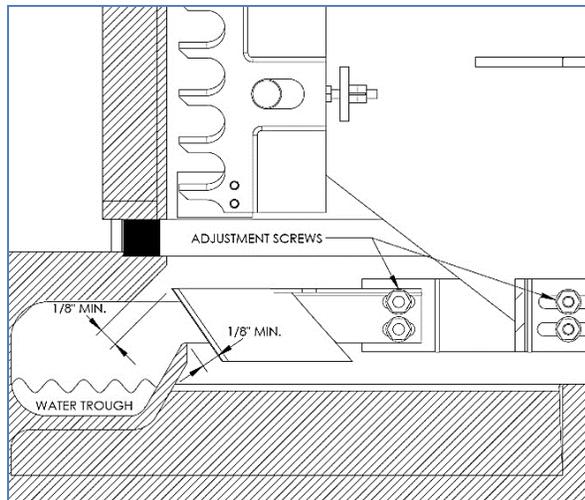

Section View of Ice Deflector

There should be a minimum 1/8" clearance between the top of the Ice Deflector and the aluminum lip of the Bottom Casting under the Evaporator.

There should also be a minimum 1/8" clearance between the outer edge of the Ice Deflector and the Bottom Casting.

The Ice Deflector should never touch the Bottom Casting.


Ice Blade

The Ice Blade shatters the ice formed on the Evaporator freezing surface as the Main Shaft rotates.

Ice harvesting problems are often caused by improper refrigeration settings. Adjusting the Ice

Blade should be a last resort after all other means have been expended.

The clearance between the outermost tip of the Ice Blade and the Evaporator freezing surface must be between 0.004" and 0.006".

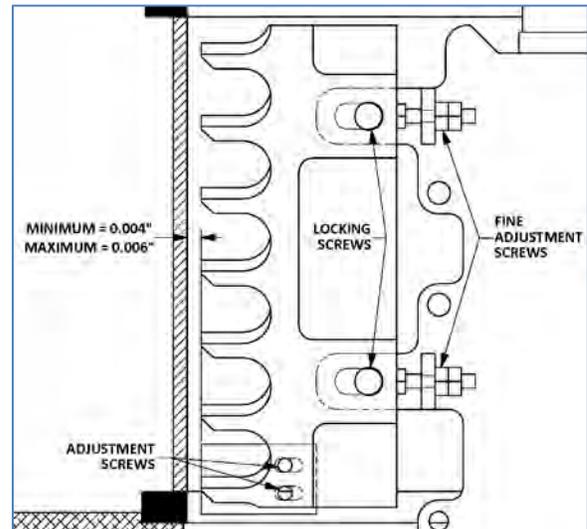

A set of feeler gauges should be used to determine the distance between the Ice Blade and the Evaporator.

Always check the clearance at a minimum of 6 points on the circumference of the Evaporator.

The Auxiliary Ice Scrapers located at the top and bottom of the Ice Blade remove any ice forming in those areas.

The clearance of the Auxiliary Ice Scraper should be the same or slightly greater than the Ice Blade.


Squeegee

The Squeegee wipes excess water from the freezing surface so that the ice is dry upon production.

The Squeegee must be in full contact with the evaporator freezing surface.

Having a Squeegee not in contact with the freezing surface will create wet ice which causes


drag on the Ice Blade. This puts greater stress on the Sleeve Bearings and causes them to wear faster than normal.

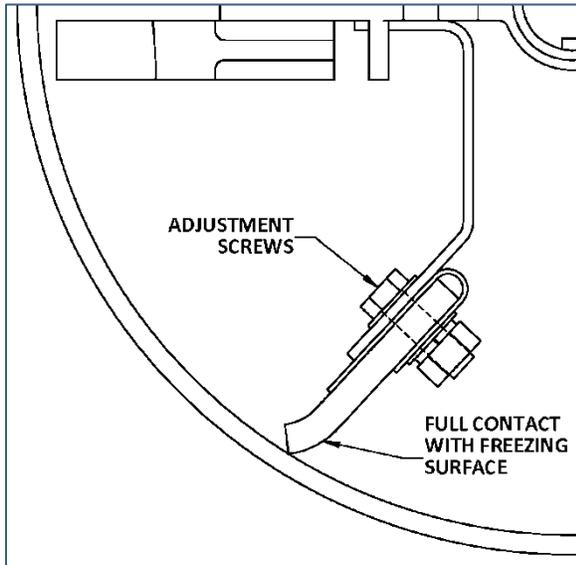

With normal usage, the Squeegee can wear over time. Worn Squeegees need to be trimmed or replaced.


Drive Motor and Speed Reducer

The Drive Motor is attached to the Speed Reducer by (4) mounting screws. There are no other screws or pins holding the Drive Motor in place.

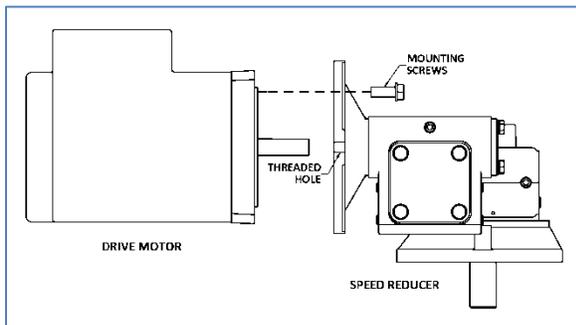

Drive Motors may provide a good deal of resistance when being removed. There are (2) threaded holes on the face of the Speed Reducer

in which the mounting screws can be inserted to help push the Drive Motor away. One motor power lead for the Drive Motor should pass through the Overload Sensing Coil on the Control Module (1) time. (230/1/60 panels only, 3 phase motors have electronic overload sensing devices).

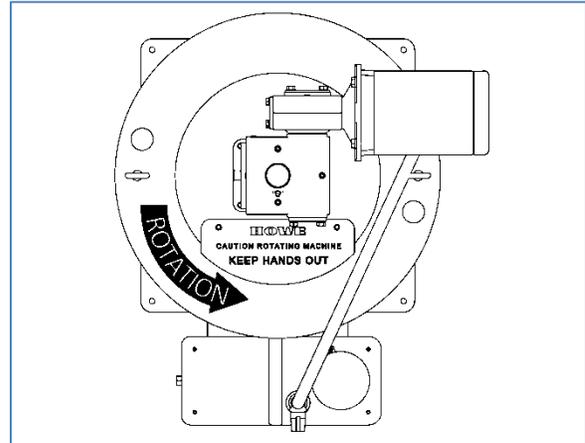

The Drive Motor and Speed Reducer should be placed in the orientation shown above.

Sleeve Bearings

Ice Flakers have two Sleeve Bearings on the Main Shaft located in the Top Casting and the Bottom Casting. Over time, normal usage can cause these bearings to wear.

Worn bearings can result in ice harvesting problems and even damage to the Evaporator.

Improper refrigeration setting and lack of maintenance can cause the Sleeve Bearings to wear faster than normal.

Please contact Howe Technical Support to receive the Sleeve Bearing Replacement instructions for your model Ice Flaker. Howe large capacity flakers (51-RL, and larger) use journal-style bearing cartridges allowing for replacement without full disassembly.

Start-Up Checklist

- 1. Is the operating water level in the Water Sump correct?**
(see Float Valve p.15)
- 2. Is the operating water level in the Water Distribution Pan correct?**
(see Water Distribution Pan p.15)
- 3. Is the Stop Valve on Sump Drain connection closed?**
(see Sump Drain p.15)
- 4. Is the Suction Temperature at the Evaporator correct?**
(see Evaporator Pressure Setting p.18)
- 5. Have you visually inspected the freezing surface of the Evaporator?**
(see Adjusting Refrigeration to the Ice Flaker p.19)
- 6. Have you set the Fan Cycling Control (6000-RL only)?**
(see Fan Cycling Control p.20)
- 7. Have you set the Low Pressure Control on the Condensing Unit?**
(see Low Pressure Control p.20)
- 8. Have you run a Field Capacity Check?**
(see Field Capacity Check p.21)
- 9. Have you set the Off-Delay Setting on the Control Module?**
(see Off-Delay Setting p.24)
- 10. Have you set the Motor Overload Setting on the Control Module?**
(see Motor Overload Setting p.24)
- 11. Have you verified proper Sequence of Operation by the Photo Eye sensors?**
(see Sequence of Operation p.29)
- 12. Have you verified proper rotation by the Gear Motor or Drive Motor?**
(see Drive Motor and Speed Reducer p.32)
- 13. Have you completed and returned the Ice Flaker warranty registration?**

Maintenance


Preventative Maintenance Schedule

	Page Number	Every 3 Months	Every 6 Months	Every 12 Months
Lubricate Sleeve Bearings	37	•		
Ensure Float Valve is unclogged and flowing freely	15		•	
Verify correct Sequence of Operation of Photo Eye sensors	29		•	
Clean and Sanitize Ice Flaker	35		•	
Replace Water Filter Cartridge	39		•	
Run a Field Capacity Check	21			•
Verify Ice Blade Clearance	31			•
Check Squeegee for excessive and uneven wear	31			•
Check Main Shaft for movement and Sleeve Bearing wear	32			•

Cleaning Procedure

To keep the evaporator in peak performance, the Ice Flaker should be cleaned every 6 months or more often if water conditions dictate.

Only use cleaning solutions that are labeled as “Nickel-Safe”.

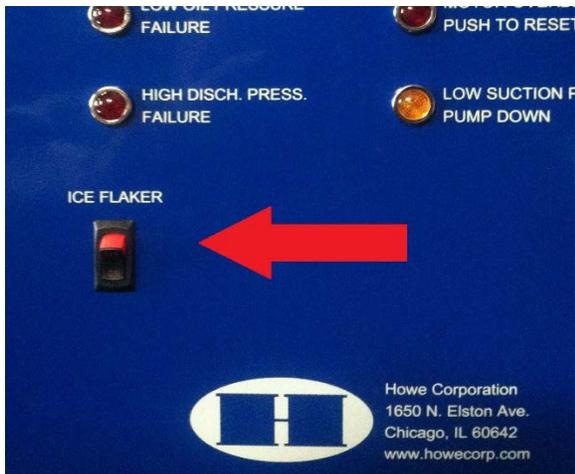

1. Turn the Power Switch “Off” at the Ice Flaker Control Panel.
2. Open Ice Flaker Control Panel and turn Off-Delay timer knob fully clockwise to 30 minutes run time.



3. Remove all ice from Ice Bin.



4. Close water supply at shut-off valve.



5. Open Ice Flaker Stop Valve to allow water to exit from Water Sump. Afterwards close Stop Valve to prevent loss of solution.



6. Prepare approved cleaning solution by following manufacturer’s instructions.



7. Pour cleaning solution into Water Sump to a level just below the side opening.
8. Turn Power Switch “On” for 2-3 seconds and then “Off” again at Ice Flaker Control Panel. This will allow cleaning solution to circulate for 30 minutes. It may require several 30 minute cycles to fully clean the Ice Flaker.
9. After cleaning, drain solution as shown in Step 5 except keep Stop Valve open.
10. Fill Water Sump with fresh water. Turn Power Switch “on” for 2-3 seconds and then “Off” again at Ice Flaker Control Panel. This will flush cleaning solution from Ice Flaker while it is being drained.
11. Continue filling Water Sump with fresh water until all cleaning solution is flushed out.

Sanitizing Procedure

1. Mix 16 oz. of household bleach with 2 gallons of warm water (90°F – 115°F).
2. Pour solution into the Water Sump to the normal operating level, then re-circulate the sanitizing solution for approximately 20 minutes by turning on Drive Motor and Water Pump. Use the off-delay setting as in Step 8 of the “Cleaning Procedure” of this manual.
3. Drain solution and rinse thoroughly with fresh water at least twice, following the technique described in Cleaning Procedure #10.
4. After the Ice Flaker is thoroughly rinsed, return to normal operation by opening water supply valve, re-adjusting Off-Delay Setting, and restoring refrigeration by turning the Power Switch back to “On”.

Alternate Method: Substitute an approved sanitizer designed for general use in food dispensing equipment in step #1. Mix sanitizing solution according to instructions on the bottle.

***** NOTICE *****

Only used Howe approved cleaning and sanitizing solutions.

No corrosive chemicals are to be used to clean or sanitize unit.

Lubrication

Speed Reducer Lubrication

All speed reducers are to be filled with Mobil Glygoyle 460 fully synthetic lubricant only.

When adding or changing oil for any reason, it should be remembered that oils of various types are not compatible with Mobil Glygoyle 460. Mixing synthetic and mineral-based oils is not recommended.

Proper oil level is maintained to the Allen head setscrew on the horizontal center line of the Speed Reducer. Oil should drain out when setscrew is removed.

Add oil through top Allen head screw opening until oil seeps out of centered screw opening.

Do not overfill.

Sleeve Bearing Lubrication

The bearings should be greased every 3-12 months, depending on use, using USDA approved food grade grease.



Zerk fittings are installed on both the top and bottom castings as pictured above, for ease of routine maintenance.

Typically, only one squirt of the grease gun is required or until you feel resistance on the pump.

Use caution to ensure the bearings is not over-greased.

Over-greasing may "pop" the seal out of its normal position.

If over-greased and the seal is popped out of position, the excess grease will need to be removed prior to re-installing the seal.

If seal is damaged due to over-greasing it may need to be replaced.

Water Filtration

The purpose of water filtration is to keep the Ice Flaker clean and operating efficiently.

The value to the user is reduced operating cost due to less maintenance, improved performance and a greater return on investment as result of extended asset life.

There are three primary categories of contaminants that damage and cause the Ice Flaker to operate inefficiently. They are listed here in order of importance with regard to impact.

1. Scale
2. Sediment
3. Chlorine

Scale

Scale or fouling is the accumulation of unwanted material on solid surfaces to the detriment of function. Scale is primarily made up of calcium and magnesium hardness compounds.

It's estimated that scale is responsible for 70% of unscheduled maintenance, inefficient operation, and down time.

Scale forms on wetted surfaces, accumulates in tubing and fittings and interferes with operation.

Sediment

The formation of scale from dissolved minerals is made worse by sediment.

Sediment is suspended particles of dirt, silt and other fine particulate matter that act as a catalyst for scale to form.

Sediment can be detrimental to the condition and performance of the Ice Flaker. Particulates cause added wear on parts and can clog valves and impede flow.



The effects of scale and sediment can be very destructive to the Ice Flaker.

Chlorine

Chlorine is the most common disinfectant used to kill pathogenic organisms in order to make our water safe to drink. However, residual free chlorine in water can contribute to pitting, rust and corrosion of stainless steel.



If not removed from water, chlorine mixes with moisture in the Ice Flaker and Ice bin to form a mild hydrochloric acid. This acid can cause surface rust to form on stainless steel surfaces in one to two years.

Howe Water Filters

Howe offers a complete line of water treatment systems designed to extend the life and performance of the Ice Flaker.



Howe Water Filters inhibit the formation of scale and provides additional corrosion protection.

They remove 95% of all dirt, rust, and sediment larger than 5 microns.

They reduce chlorine to less than 2 PPM to guard against corrosion and improve ice quality.

Water Filter Cartridge Replacement

1. Turn off water filtration system by closing ball valve.
2. Press the red button to release pressure.
3. Remove housing(s) – use filter wrench if necessary. Clean housings with warm water. If desired, disinfect housings using a low-concentration bleach/water solution. Let stand 5 minutes, and then discard.
4. Insert new cartridges into filter housings. Match cartridge model numbers to model numbers on bracket.
5. Make certain the O-ring is properly positioned and reinstall filter housing (hand tighten only).
6. Slightly open the inlet ball valve; push the red pressure relief button to release trapped air until a small amount of water comes out – release the red button and fully open the ball valve.
7. Turn connected equipment back on.

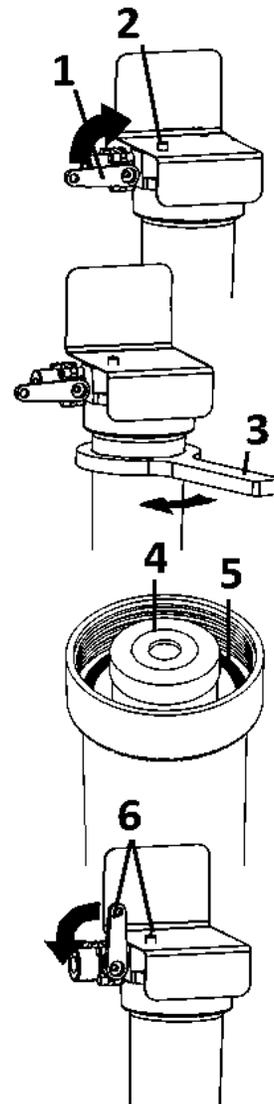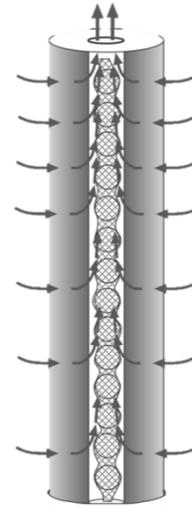

Troubleshooting



(Note: All wire colors are subject to change)

Problem	Possible Cause	Possible Solution
Ice Flaker will not run	<ol style="list-style-type: none"> 1. Unplugged or defective Photo Eye(s). 2. Defective Level Control Relay (LC1). 3. No control power from Transformer (T1). 4. Open switch or loose wiring. 5. Defective Control Module (CM). 	<ol style="list-style-type: none"> 1. Ensure Photo Eyes are properly and securely connected. Place a wire jumper between terminals labeled "Blue" and "Black" at the Control Panel. If Ice Flaker starts, Photo Eyes may be defective and need to be replaced. 2. Place a wire jumper between terminals #5 (red) and #6 (red) at the Level Control Relay (LC1). If Ice Flaker starts, Level Control Relay (LC1) may be defective and need to be replaced. 3. Check voltage across Term 1 (purple) and Term 2 (yellow/orange) at Control Module (CM). If 24 VAC not present, Transformer (T1) may be defective and need to be replaced. 4. Place a wire jumper between Term 2 (yellow/orange) and Term 3 (red) at Control Module (CM). If Ice Flaker starts, trace voltage from Term 3. Check all wire terminals and tighten as necessary. 5. Place a wire jumper between Term 2 (yellow/orange) and Term 3 (red) at Control Module (CM). If Ice Flaker does not start, Control Module (CM) may be defective and need to be replaced.
Ice Flaker does not shut down when Ice Bin is full	<ol style="list-style-type: none"> 1. Defective Emitter Photo Eye. 2. Defective Receiver Photo Eye. 3. Level Control Relay (LC1) is jumped out. 4. Defective Control Module (CM). 	<ol style="list-style-type: none"> 1. Unplug Emitter Photo Eye and wait longer than Off-Delay setting. If Ice Flaker stops, Emitter Photo Eye may be defective and need to be replaced. 2. Unplug Receiver Photo Eye and wait longer than Off-Delay setting. If Ice Flaker stops, Receiver Photo Eye may be defective and need to be replaced. 3. Check for a wire jumper between terminals #5 (red) and #6 (blue) at Level Control Relay (LC1). If present remove wire jumper. 4. Remove wire from Term 3 (red) at Control Module (CM) and wait longer than Off-Delay setting. If Ice Flaker does not stop, Control Module (CM) may be defective and need to be replaced.
Solenoid Valve will not open	<ol style="list-style-type: none"> 1. Defective Control Module (CM). 2. Blown Fuses. 3. Defective Water Pump Relay (R1). 4. Defective Solenoid Valve. 	<ol style="list-style-type: none"> 1. Verify 24 VAC present across Term 1 (purple) and Term 3 (red) at Control Module (CM). Remove wires and check for continuity between Term 7 (black) and Term 8 (red). If the contacts remain open, Control Module (CM) may be defective and need to be replaced. 2. Check for control voltage across FU1 fuses. Replace as needed. 3. Place a wire jumper between terminals #14 (black) and #21 (black) at Water Pump Relay (R1). If Solenoid Valve opens, Water Pump Relay (R1) may be defective and need to be replaced. 4. Verify control voltage at terminals Sol A1 and Sol A2 in the Control Panel. If voltage is present, Solenoid Valve may be defective and need to be replaced.

	5. Loose wiring.	5. Check all wire terminals and tighten as necessary.
Problem	Possible Cause	Possible Solution
Drive Motor will not run or Ice Flaker in Overload Condition	<ol style="list-style-type: none"> 1. Defective Control Module (CM). 2. Defective Drive Motor. 3. Sleeve Bearings are seized. 4. Speed Reducer is seized. 5. Motor Overload setting is too low. 6. Loose wiring. 	<ol style="list-style-type: none"> 1. Verify 24 VAC present across Term 1 (purple) and Term 3 (red) at Control Module (CM). Check voltage between Term 1 and Term 6 (blue). If no voltage present, Control Module (CM) may be defective and need to be replaced. 2. Verify control voltage at terminals T1 Driv and T2 Driv in the Control Panel. If voltage is present, Drive Motor may be defective and need to be replaced. 3. Remove the Gear Motor from the Mounting Hub or the Speed Reducer from Top Casting and try to push the Ice Blade by hand. If the Ice Blade will not move, the Sleeve Bearings may be seized and need to be replaced. 4. Remove Speed Reducer and bring voltage to the Drive Motor. If the output shaft cannot turn while not attached to the Ice Flaker, it may be seized and need to be replaced. 5. Raise the Motor Overload setting at the Control Module (CM). Verify the amperage draw is in correspondence with the nameplate. 6. Check all wire terminals and tighten as necessary.
Water Pump will not run	<ol style="list-style-type: none"> 1. Defective Control Module (CM). 2. Blown Fuses. 3. Defective Water Pump. 4. Loose wiring. 	<ol style="list-style-type: none"> 1. Verify 24 VAC present across Term 1 (purple) and Term 3 (red) at Control Module (CM). Check voltage between Term 1 and Term 6 (blue). If no voltage present, Control Module (CM) may be defective and need to be replaced. 2. Check for control voltage across FU1 fuses. Replace as needed. 3. Verify control voltage at terminals T1 Pump and T2 Pump in the Control Panel. If voltage is present, Water Pump may be defective and need to be replaced. 4. Check all wire terminals and tighten as necessary.
Ice does not harvest at the bottom of Evaporator	<ol style="list-style-type: none"> 1. TXV is underfeeding. 2. System is short of refrigerant. 3. Improper location of TXV sensing bulb. 	<ol style="list-style-type: none"> 1. Adjust refrigeration to Ice Flaker. 2. Check for bubbles in the Sight Glass. If present, charge system as needed. 3. Relocated bulb to 4:30 clock position as originally set by factory.
Ice does not harvest on one side or angular section of Evaporator	<ol style="list-style-type: none"> 1. Sleeve Bearings are worn. 2. Ice Blade clearance is too high. 	<ol style="list-style-type: none"> 1. Remove Speed Reducer or Gear Motor and check for "play" in Sleeve Bearings. Replace if worn. 2. Adjust Ice Blade clearance to proper setting.
Ice accumulates on the ribs of Bottom Casting	<ol style="list-style-type: none"> 1. Ambient Temperature is too low. 	<ol style="list-style-type: none"> 1. If ambient temperature is below 50°F, relocate Ice Flaker to a warmer area. Contact Howe about Low Ambient Kit.
Ice Blade is frozen in-place	<ol style="list-style-type: none"> 1. Motor Overload setting is too high. 2. Ice is freezing too thick or too hard. 3. Drive Motor has stopped. 4. Flex Coupling is broken. 	<ol style="list-style-type: none"> 1. Adjust the Motor Overload setting at the Control Module (CM). 2. Adjust refrigeration to Ice Flaker. 3. See "Drive Motor will not start" above. 4. Check and replace Flex Coupling as necessary.

Problem	Possible Cause	Possible Solution
Ice Flaker not meeting rated capacity	Run Field Capacity Check before making any adjustments (see p.21).	
	<ol style="list-style-type: none"> 1. Incorrect Evaporator Temperature. 2. Supply water temperature is outside mandatory range. 3. Ambient temperature is outside mandatory range. 	<ol style="list-style-type: none"> 1. Adjust refrigeration to Ice Flaker. 2. Adjust supply water to between 45°F and 90°F. For temperatures below range, contact Howe about Low Temperature Mixing Valve. 3. Adjust ambient temperature to between 50°F and 100°F. In unable to adjust, relocate the Ice Flaker. For temperatures below range, contact Howe about Low Ambient Kit.
Ice freezes together in the Ice Bin	<ol style="list-style-type: none"> 1. Water Distribution Pan is overflowing. 2. Water from Side Spouts or Lead Spout is not reaching freezing surface of Evaporator. 3. Water is “ramping” off rings of ice formed on Evaporator. 4. Ice Bin is not draining properly. 5. Ice turnover is low and Ice Bin inventory has become stale and clumped by lengthy storage time. 	<ol style="list-style-type: none"> 1. Adjust Water Regulating Valve so the Water Distribution Pan is halfway full. 2. Clean spouts of any debris or blockages. Make sure all spouts are perpendicular to and within reasonable distance from surface of Evaporator. 3. Adjust refrigeration to the Ice Flaker. 4. Check that all drains are flowing freely and pitched away from Ice Bin. 5. Use or discard ice within a reasonable time of producing it. Contact Howe about Energy Saver Ice Production Management System.
Condensing Unit is in Low Suction Pressure Pump Down	<ol style="list-style-type: none"> 1. Lack of refrigerant. 2. Insufficient water supply. 3. Refrigeration line blockage. 	<ol style="list-style-type: none"> 1. Check for leaks and repair. Add refrigerant. 2. Replace Water Filter. Check for clogged tubes or valves. 3. Check filter drier, TXV, EPR and replace as necessary.
Condensing Unit is off on Low Oil Pressure Failure	<ol style="list-style-type: none"> 1. Lack of refrigerant. 2. Refrigerant flood back. 3. Improper piping or traps. 	<ol style="list-style-type: none"> 1. Check for leaks and repair. Add refrigerant. 2. Adjust refrigeration to Ice Flaker. 3. Correct piping.
Condensing Unit is off on High Discharge Pressure Failure	<ol style="list-style-type: none"> 1. Non-condensables in the system. 2. System is overcharged with refrigerant. 3. Fan is not running. 	<ol style="list-style-type: none"> 1. Remove the non-condensables. 2. Remove excess refrigerant. 3. Check Fan Cycling Control and adjust as necessary.

Wiring Diagram – 460/3/60 ICE FLAKER

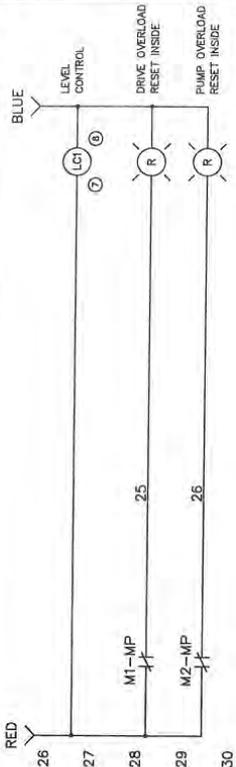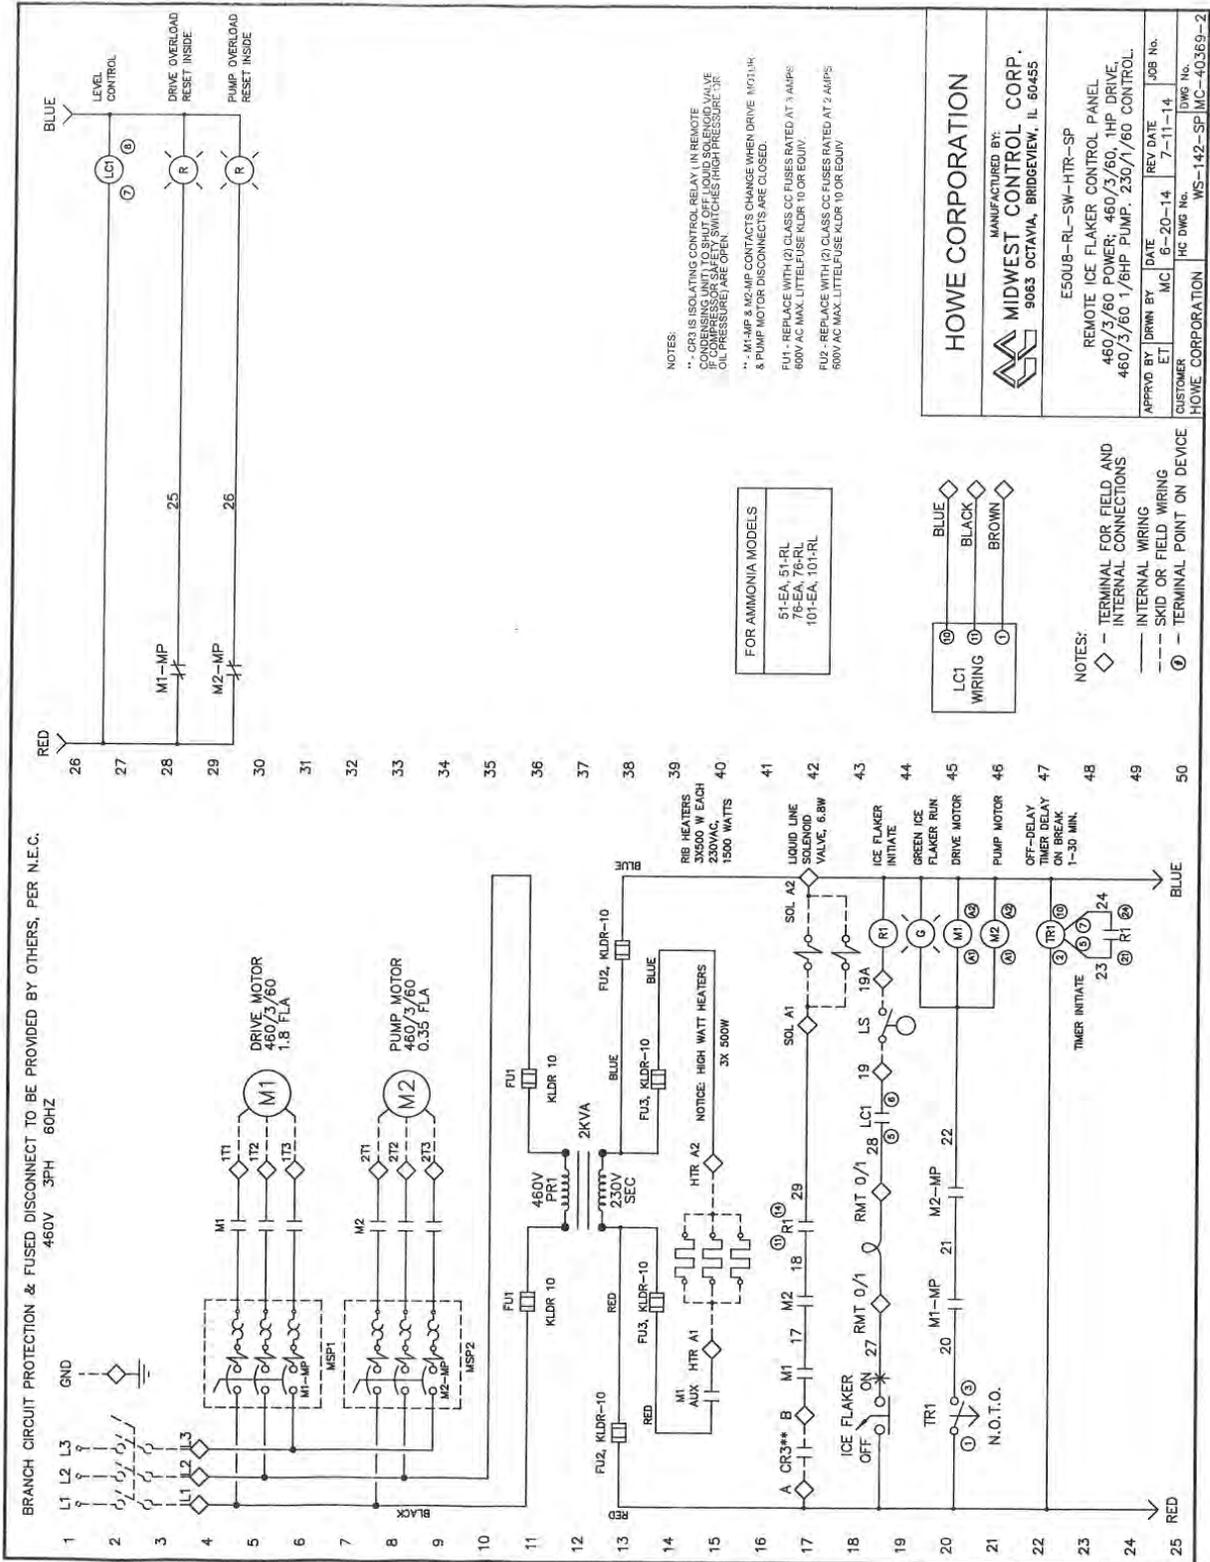

- NOTES:
- ** - CR3 IS ISOLATING CONTROL RELAY. IN REMOTE CONTROL SYSTEMS, CR3 MUST BE INSTALLED IN THE FIELD. IF COMPRESSOR SAFETY SWITCHES (HIGH PRESSURE, OIL PRESSURE) ARE OPEN.
 - ** - M1-MP & M2-MP CONTACTS CHANGE WHEN DRIVE MOTOR IS ON.
 - FU1 - REPLACE WITH (2) CLASS CC FUSES RATED AT 3 AMPS 600V AC MAX. LITTELFUSE KLD-10 OR EQUIV.
 - FU2 - REPLACE WITH (2) CLASS CC FUSES RATED AT 2 AMPS 600V AC MAX. LITTELFUSE KLD-10 OR EQUIV.

FOR AMMONIA MODELS

51-EA, 54-RL
76-EA, 76-RL
101-EA, 101-RL


HOWE CORPORATION

MANUFACTURED BY:
MIDWEST CONTROL CORP.
 9063 OCTAVIA, BRIDGEVIEW, IL 60455

E50UB-RL-SW-HTR-SP


REMOTE ICE FLAKER CONTROL PANEL
 460/3/60 POWER; 460/3/60, 1HP DRIVE,
 460/3/60 1/8HP PUMP. 230/1/60 CONTROL.

APPROVED BY	DRWN BY	DATE	REV. DATE	JOB No.
ET	MC	6-20-14	7-11-14	
CUSTOMER	MC Dwg No.	MS-142-SP	MC-40369-2	



- NOTES:
- ◇ - TERMINAL FOR FIELD AND INTERNAL CONNECTIONS
 - INTERNAL WIRING
 - - - SKID OR FIELD WIRING
 - ⊙ - TERMINAL POINT ON DEVICE


Wiring Diagram - Condensing Unit (10 ton)

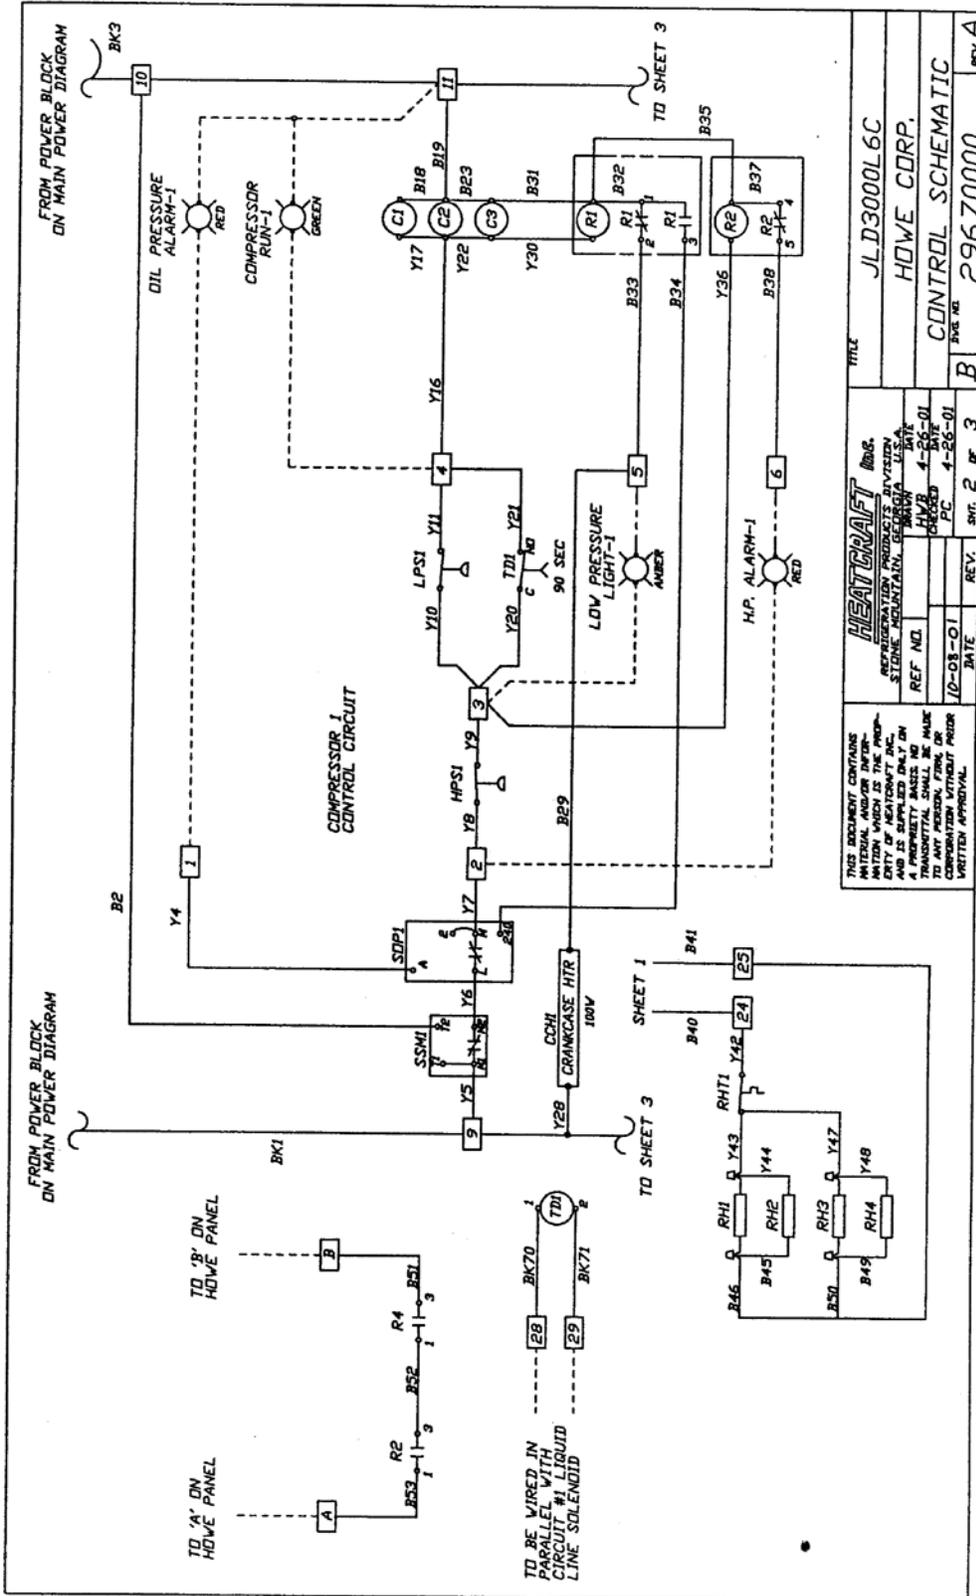


HEATCRAFT REFRIGERATION DIVISION STONE MOUNTAIN, GEORGIA		TITLE JLD3000L6C HOWE CORP. CONTROL SCHEMATIC
REF. NO. HMB 4-26-01	DATE PC 4-26-01	SHEET NO. 2 OF 3
DATE 10-08-01	REV. 3	REV. A

THIS DOCUMENT CONTAINS MATERIAL AND/OR INFORMATION WHICH IS THE PROPERTY OF HEATCRAFT INC. IT IS TO BE KEPT ON A CONFIDENTIAL BASIS AND NO TRANSMITTAL SHALL BE MADE TO ANY PERSON, FIRM OR ORGANIZATION WITHOUT PRIOR WRITTEN APPROVAL.


Wiring Diagram - Condensing Unit (10 ton)

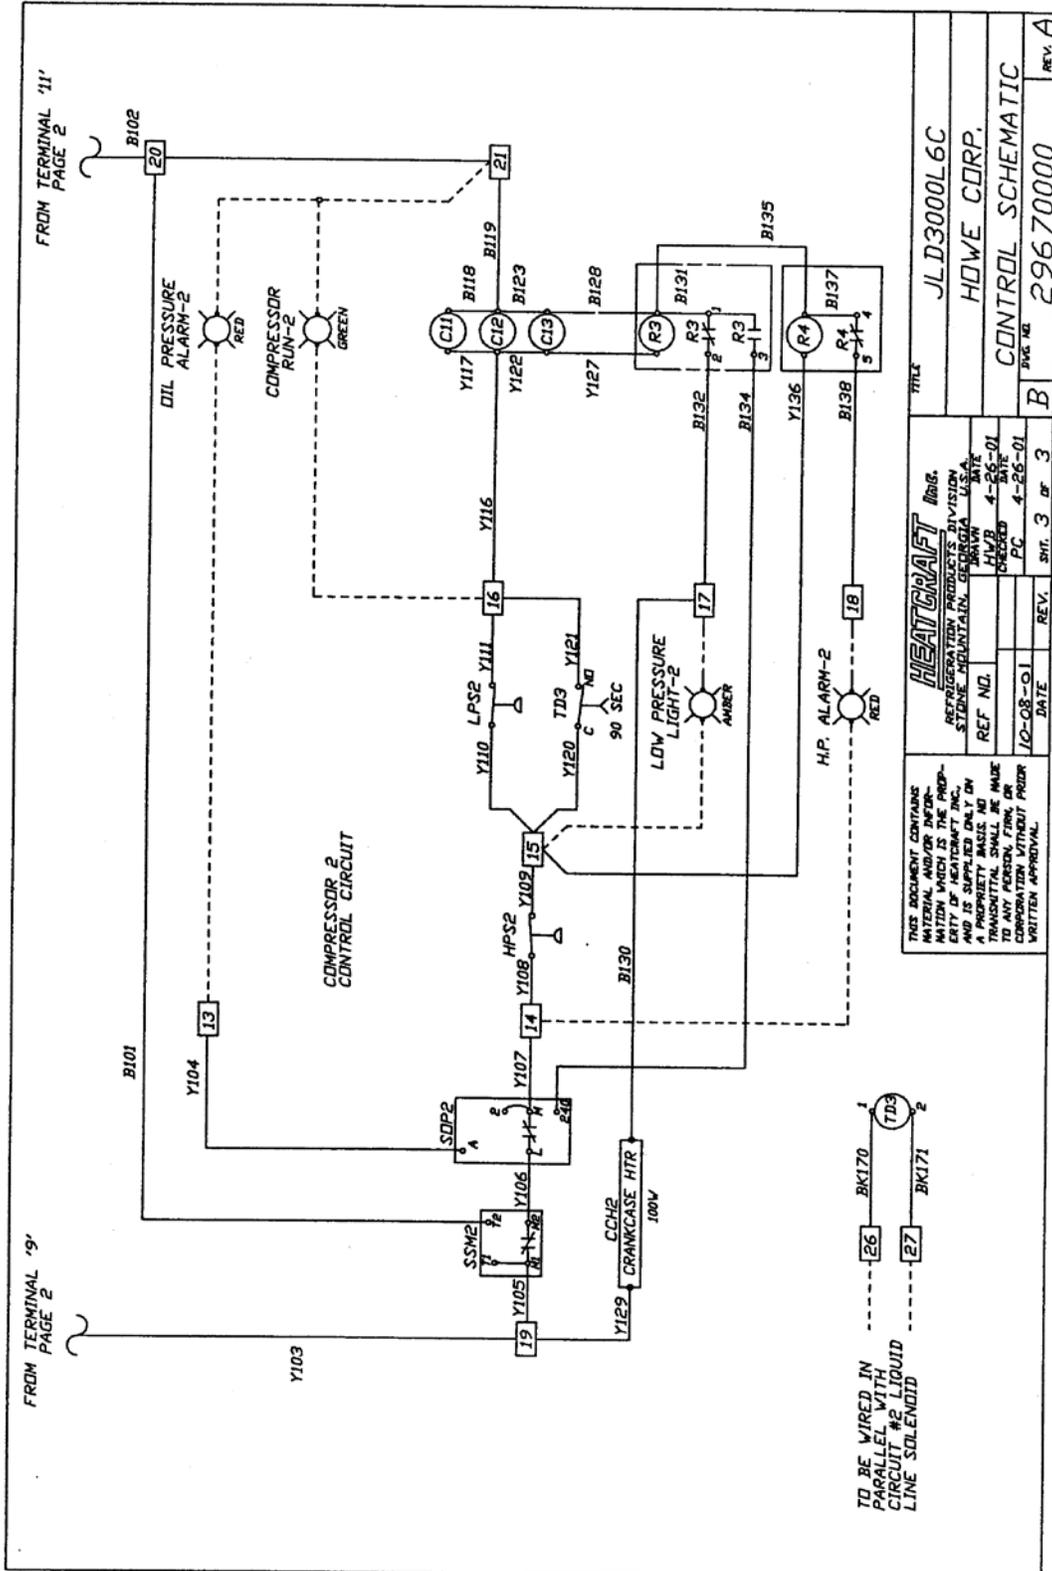

Wiring Diagram – Condensing Unit (2a)

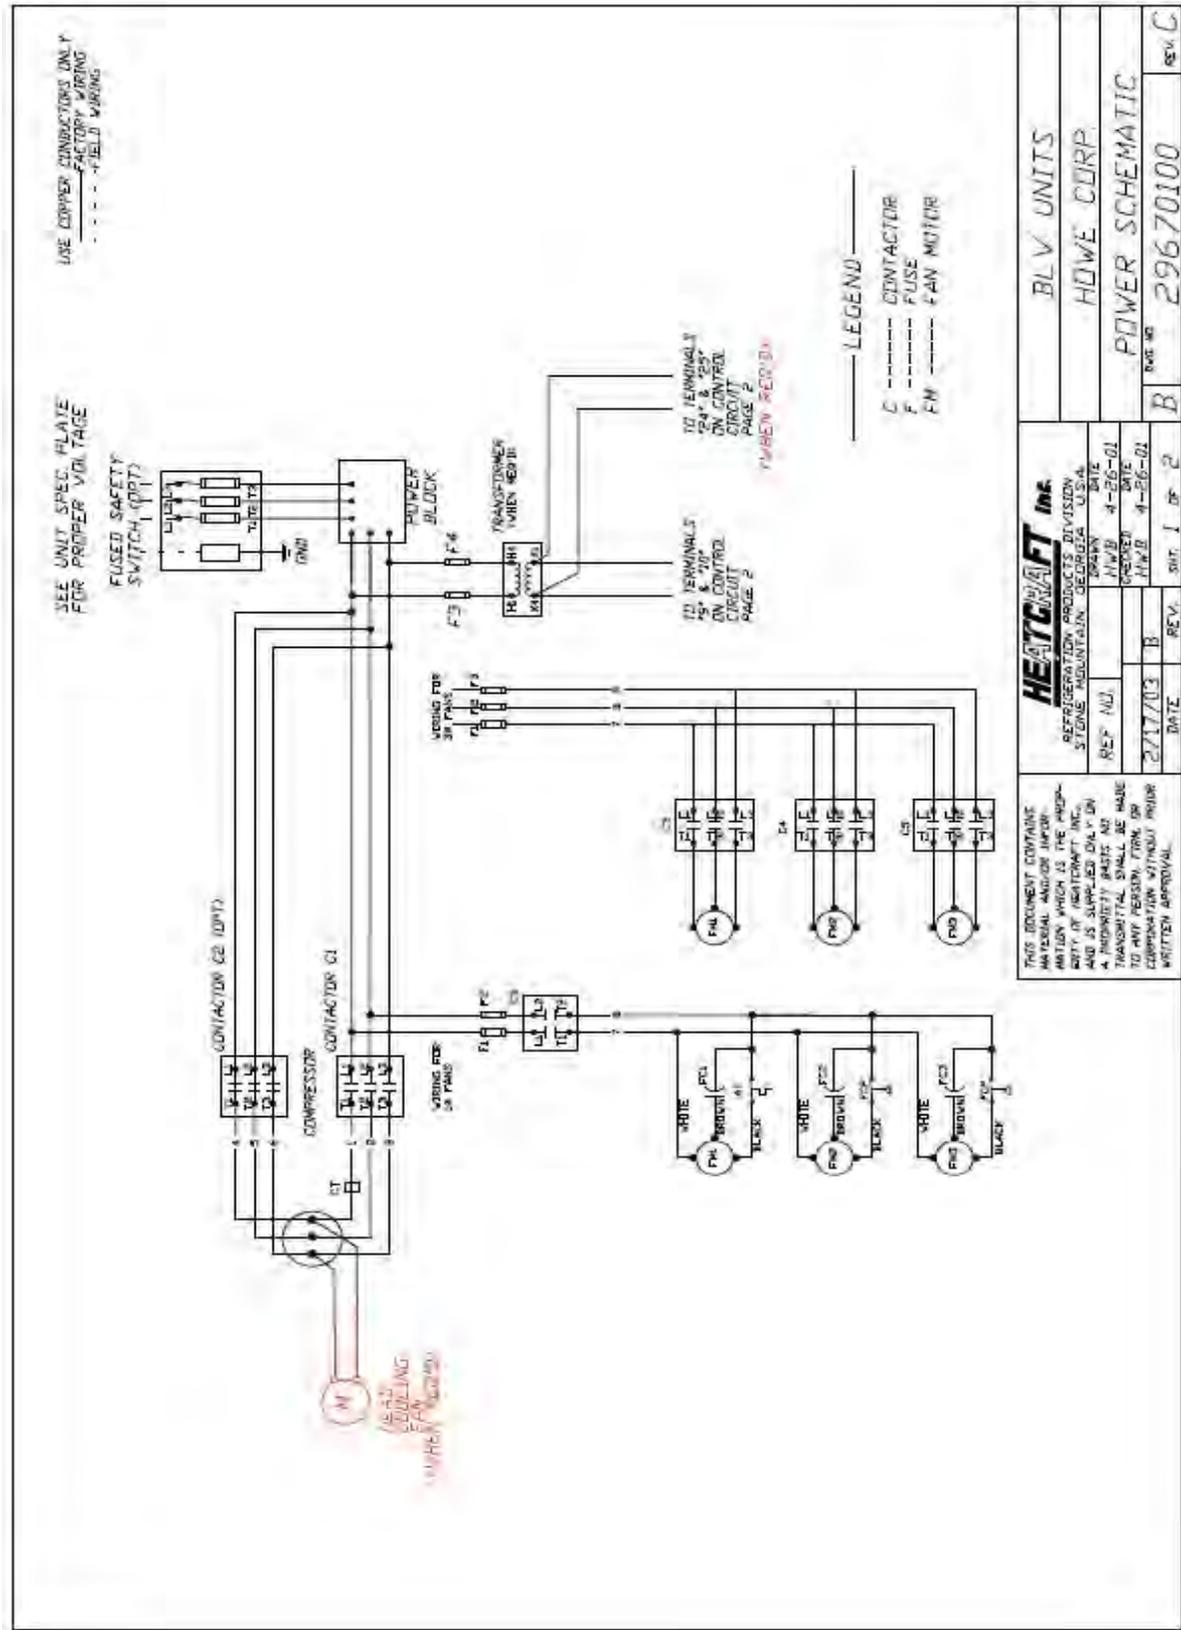


Wiring Diagram - Condensing Unit (2b)

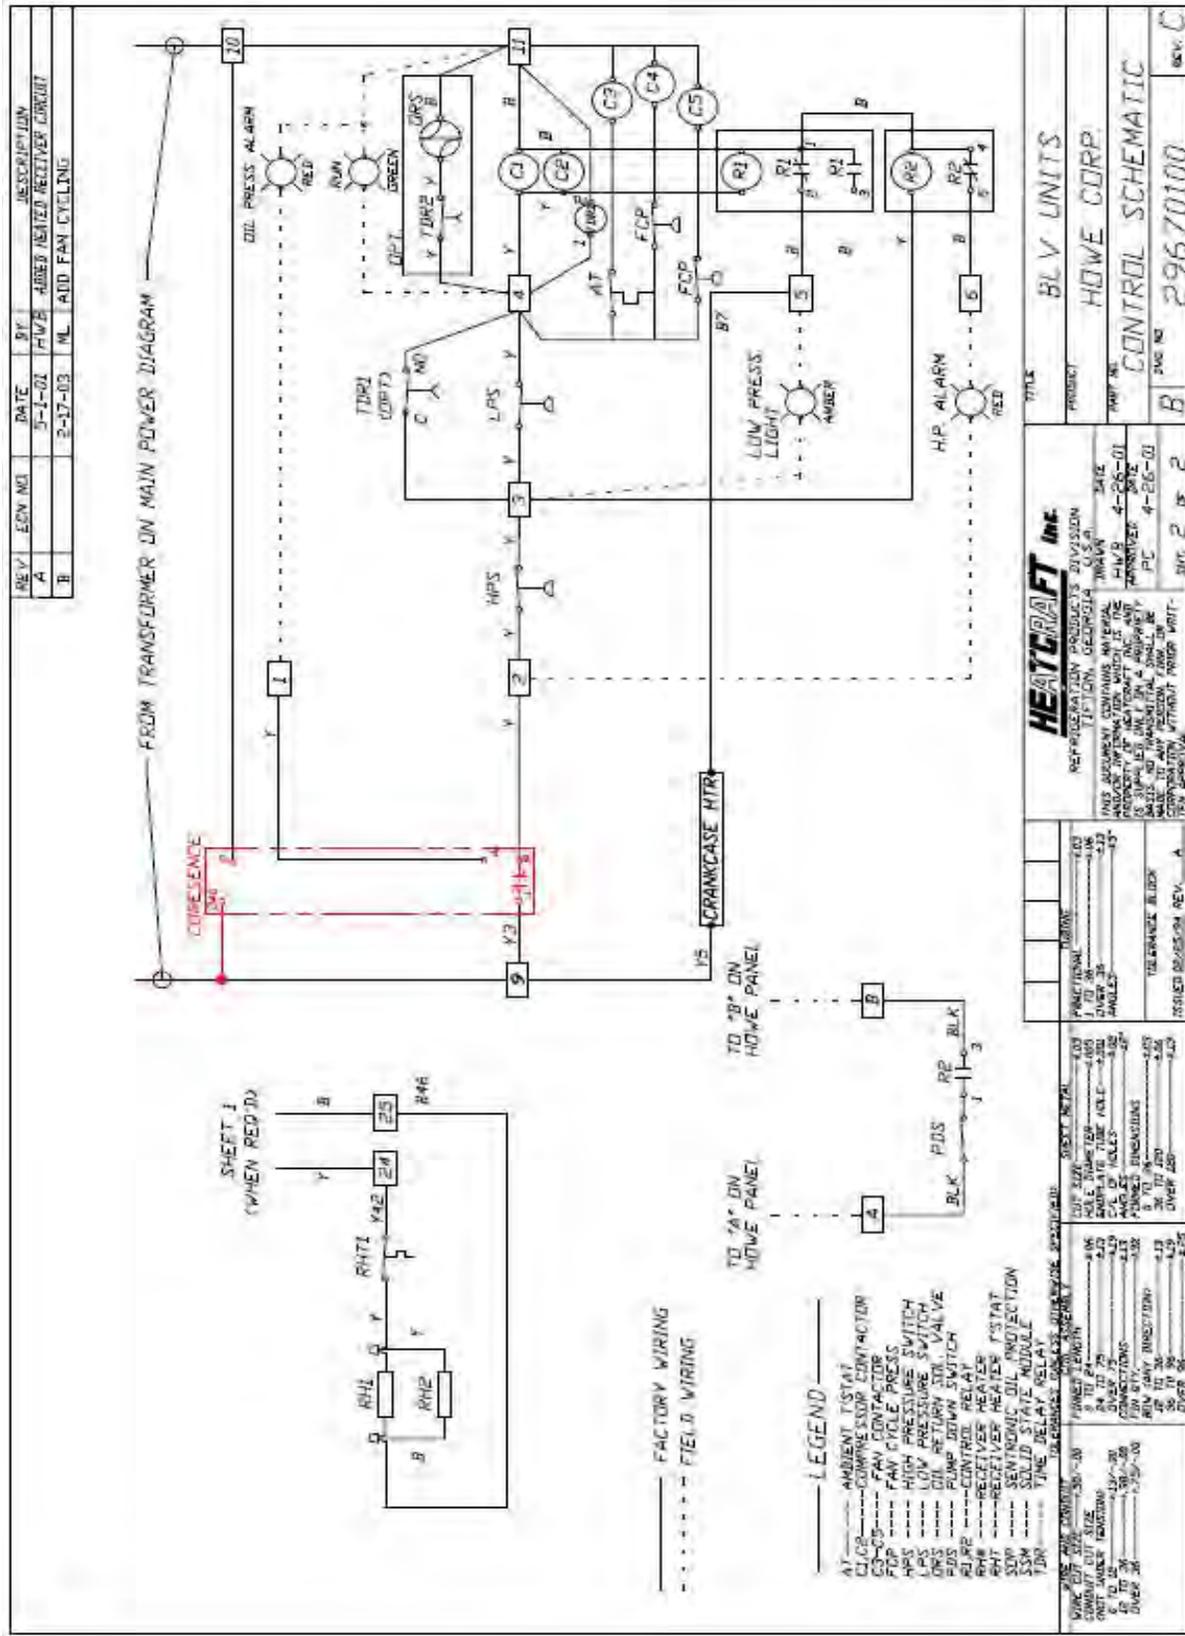

Replacement Parts

Parts List (51-RL, 76-RL & 101-RL)

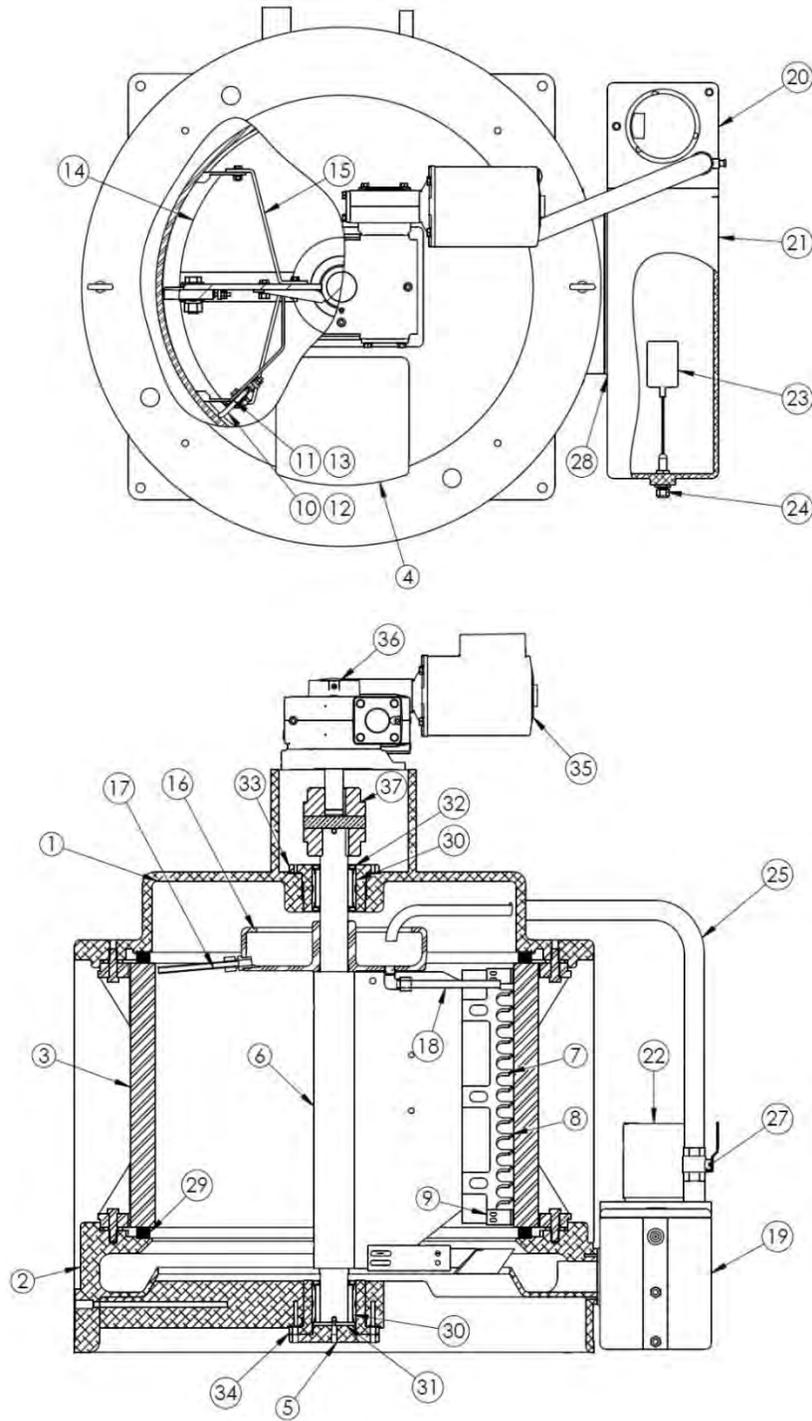

Non-Replaceable Parts				
Ref. No.	Description	Part No.		
		51-RL	76-RL	101-RL
1	Top Casting	E50A1		
2	Bottom Casting	E50B2		
3	Evaporator	E50C1	E75C1	E100C1

Replacement Parts					
Ref. No.	Description	Includes	Part No.		
			51-RL	76-RL	101-RL
4	Handhole Cover		E50A2		
5	Bottom Bearing Cover		E50K5		
6	Main Shaft		E50D1	E75D1	E100D 1
7	Top Ice Blade		E30E3	E20E2	E30E3
8	Bottom Ice Blade		N/A	E30E3	
	Feeler Gauge Kit	Set of 7 gauges	E10E15		
9	Auxiliary Ice Scraper	2 required	E20E4		
10	Squeegee		E30F3	E75F3	E100F 3
11	Squeegee Wrapper		E30F8	E75F4	E100F 4
12	Top Squeegee Bracket		E50F1	E75F1	E50F1
13	Bottom Squeegee Bracket		N/A	E50F1	
14	Ice Deflector Blade		E50G5		
15	Ice Deflector Bracket	2 required	E50G9		
16	Water Distribution Pan (No Fittings)		E50H1		
17	Water Distribution Side Spout	11 required	E50H19		
18	Water Distribution Bottom Spout		E50H31		
19	Water Sump Tank (No Covers)		E50H8		
20	Water Sump Bolt Down Cover	Pump Side	E50H11		
21	Water Sump Removable Cover		E50H15		
22	Water Pump; 230-460/3/50-60		E50Q1		
	Water Pump; 220-230/1/50-60		E50Q2		
	Water Pump; 575/3/60		E50Q9		
23	Water Float Valve		E50H18		
24	Water Float Valve Fitting		CNBHF-SG-BR08		
25	Water Tube Kit with Fitting	Copper Water Tube Insulation Connector	E50H38-KT		
26	Water Tube Fitting		CNM-SG-BR14x12		
27	Water Tube Regulating Valve		E50H24		
28	Water Sump Gasket		E50J3		
29	Insulating Ring	2 required Top & Bottom	E50J1		
30	Main Bearings	2 required	E50K1		

Replacement Parts					
Ref. No.	Description	Includes	Part No.		
			51-RL	76-RL	101-RL
31	Bottom Bearing Thrust Plate		E50K2		
32	Main Bearing Grease Seal	3 required	E50K14		
33	Top Main Bearing Retainer		E50K3		
34	Bottom Main Bearing Retainer		E50K4		
35	Drive Motor; 208-230/1/60; ODP		E50M2		
	Drive Motor; 208-230/1/60; TEFC		E50M6		
	Drive Motor; 220/1/50; ODP		E50M3		
	Drive Motor; 220/1/50; TEFC		E50M7		
	Drive Motor; 460/3/60; ODP		E50M1		
	Drive Motor; 460/3/60 TEFC		E50M4		
	Drive Motor; 380/3/50; ODP		E50M9		
	Drive Motor; 380/3/50; TEFC		E50M5		
	Drive Motor; 575/3/60; ODP		E50M11		
	Drive Motor; 575/3/60, TEFC		E50M12		
36	Speed Reducer; 60hz		E50R1-935		
	Speed Reducer; 50hz		E50R2-935		
37	Flex Coupling		E50N1		
	Heater Elements (150Watt)	3 Required	HT150X240-037X80		
	Heater Elements (500Watt)	3 Required	HT500-240-037x80		
	Speed Reducer Oil		SR-OIL-SYN		
	R-404A / R-507 Balance Port TXV Valve	TXV Strainer	E50V6-KT	E75V5-KT	(2)E50V6-KT
	R-404A / R-507 Standard TXV Valve	TXV Strainer	E50V6-KT	E75V3-KT	(2)E50V6-KT
	R-22 / R-407 Balance Port TXV Valve	TXV Strainer	E50V7-KT	E75V4-KT	(2)E50V7-KT
	R-22 / R-407 Standard TXV Valve	TXV Strainer	E50V5-KT	E75V2-KT	(2)E50V5-KT
	Solenoid Valve		B14S2	B19S2	B25S2

Parts List (230/1/60 Control Panel & Miscellaneous)



Replacement Parts		
Ref. No.	Description	Part No.
	2 Light Control Panel	E20T40-RL
	6 Light Control Panel	E20T40-SCA
1	Motor Contactor	E20T44
2	Control Module	E20T48
3	Transformer	E20T31
4	Fuses	E20T49
5	Water Pump Relay	E20T45
	Water Pump Relay Holder	E20T46
	Ice Level Control Relay	E20T68
6	Ice Level Control Base	5V013
	Power Switch	E20T24
	Ice Faker Run, Green 24VAC Indicator Light; RL& SCA Panels	LGX-24
	Motor Overload, Red 24VAC Indicator Light; RL & SCA Panels	LRN-24
	Compressor Run, Green 230VAC Indicator Light; SCA Panels	LGX-2
	Low Suction Pressure Pump-down Amber 230VAC Indicator Light; SCA Panels	LAN-2
	Low Oil Pressure & High Discharge Pressure Red 230VAC Indicator Light; SCA Panels	LRN-2
	Overload Reset Button (N.O.)	E20T23
	Level Control Emitter	E20T104-NP
	Level Control Receiver	E20T105-NP
	Replacement Filter Cartridge	E10H57
	Replacement O-Ring	E10H63
	Filter Wrench	SW-4
	Ice Machine Cleaner (Nickel Safe)	E10V1
	Ice Machine Sanitizer	E10V31

